

■ お手入れ方法

間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。
使用後や保管時は以下の点を参考にご覧ください。

- 使用後は、泥汚れなどをあらかじめ水洗いし、陰干しして乾燥後に収納してください。汚れたまま、あるいは濡れたまま長時間放置するとカビの発生する可能性があり、また生地も劣化しやすくなります。
- 長期の使用により、撥水性能（水を弾く力）が低下した場合は別売のS.R. スプレー等の撥水スプレーをご使用ください。
- ドライクリーニングや洗濯機による洗濯はできません。生地を傷める恐れがあります。

■ 保管方法

- 本製品を長期間使用せずに保管する場合は、なるべくゆるくたたみ、直射日光の当たらない風通しの良い場所に保管してください。付属の収納袋は、携行性を重視しているため、きつめにたたまいと入らないので使用を避けてください。
- 火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。

■ 廃棄方法

- 廃棄方法は住まいの自治体の収集方法に従ってください。

■ アフターサービス

ご購入求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、ご購入求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。
製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。
なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■ 仕様

○ 寸法

- | | | |
|---|--|--|
| ○ #1122493
クロノスドーム
グラウンドシート 1型
92×212 cm | ○ #1122494
クロノスドーム
グラウンドシート 2型
122×222 cm | ○ #1122495
クロノスドーム
グラウンドシート 4型
202×232 cm |
|---|--|--|

○ 素材

70デニール・ナイロン・タフタ（ウレタン・コーティング）

○ 対応テント

- クロノスドーム 1・2・4型
- クロノスカビン 2型
- サンダードーム 1・2型
- レラドーム 4型

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

株式会社 **モンベル** 本 社 〒550-0013 大阪市西区新町 2-2-2 Tel. 06-6531-3544 フリーコール：☎ 0088-22-0031
商品についてのお問い合わせはカスタマー・サービスまで モンベルホームページ <http://www.montbell.jp>

mont・bell

取扱説明書

クロノスドーム グラウンドシート

Chronos Dome Ground Sheet


この度はお買いあげいただき、誠にありがとうございます。この取扱説明書（以下「本説明書」といいます）は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。

なお、ご不明な点等ございましたら、販売店もしくは（株）モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

■ 特長

本製品はクロノスドームのフロア（底部）の保護するためにテントの下に敷くシートです。ポールとフライシートを利用して自立式タープとしてもご利用いただけます。

■ 各部の名称

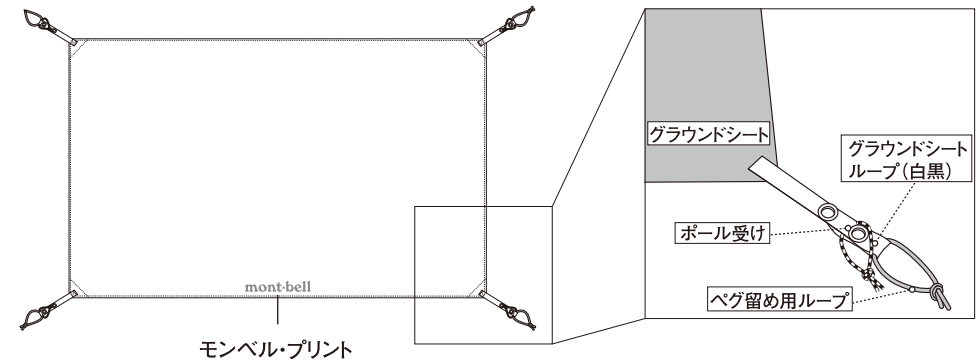

構成部品

本体



※テント本体は付属しません。

収納袋



取扱説明書
（本説明書）



■ 安全上の注意 必ずお読みください

危険 人が死亡または重傷を負う危険が差し迫って生じることが想定される内容です。

- 本製品内や本製品の近くでは、絶対に火気を使用しないでください。火災や一酸化炭素中毒の恐れがあります。
- 台風、落雷、強風、豪雨、大雪などの厳しい自然条件の際は、キャンプ場の管理担当者の指示に従い安全な場所に避難してください。
- 河原や河川付近に設営する際は気象条件により突然増水することがあります。設営場所は特に注意してください。

警告 場合により人が死亡または重傷を負う可能性が想定される内容です。軽傷または物的損害が発生する頻度が高いことが想定される内容です。

- 本製品を設営される際は、周囲の環境や気象条件などを充分考慮し、安全を確認してください。
- 本製品の設営の際は水はけがよく、出来るだけ平らな場所を選んでください。
- 本製品の改造や分解などは絶対にしないでください。性能が損なわれ、充分に保護能力が発揮できない恐れがあります。
- 使用前は毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合は直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。
- 正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発揮できない恐れがあります。

注意 人が傷害を負ったり物的損害の発生が想定される内容です。

- 稜線上や大木の近く、広い草原では落雷にも注意してください。
- キャンプ場やキャンプ許可地以外では使用しないでください。
- 設営地はできるだけ平坦で、危険のない場所を選んでください。
- 使用の際は必ずペグで固定してください。砂地や雪上では状況に応じたペグ等が別途必要です。
- 本製品は太陽光線の紫外線により生地が劣化します。また、硫黄ガスが発生する温泉地等でも寿命を縮めますのでご注意ください。
- 本製品に慣れるため、実際にフィールドへ出かける前に必ず試し張りを行ってください。
- 小さいお子様にペグ打ちの作業をさせないでください。


■ 使用前の点検

- ☐ポール受けなどの破損がないか
- ☐生地に破れがないか

■ 使用方法

○ テントの下で使用する場合

- ①通常の手順でクロノドーム本体を組み立てます。
 - ②収納袋から本製品を取り出して地面に広げます。このときモンベル・プリントがある面が上側になるように敷きます。また、このプリントのある辺がテント本体の入り口のある辺と一致するようにします(図A)。
 - ③地面に広げた本製品の上にテント本体を置きます。組み上がったテント四隅のポール受けに差し込まれたポールをさらに本製品の四隅のポール受けに差し込み、ペグで固定します(図B)。
- ※ポール受けへのポールの固定は通常は外側で行ってください。雨、結露などで生地の張りが弱まった際には内側で行います。
※クロノドーム2グラウンドシートをクロノスキャビン2と共にペグで固定する際は、グラウンドシートのペグ留め用ループの長さをクロノスキャビンに合わせて短く結び直してください。

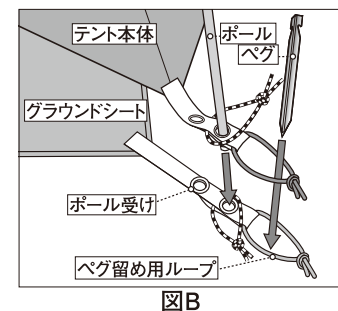


○ 自立式タープとして使用する場合

- ①収納袋から本製品を取り出して地面に広げます。
 - ②テント本体に付属のポールを組立て、本製品の四隅のポール受けに差し込みます。
 - ③フライシートのフックを本製品の四隅のループ(白黒)に掛けます(図C)。
- ※テントのフライシートとポールを利用して自立式タープとしてご使用になる場合は、張り綱取り付けループの裏側のベルクロとポールを必ず結束させてください。



※写真はクロノドームテント2型のフライシート、ポールと本製品を組み合わせたものです。

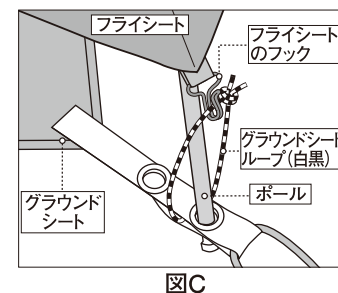

フライシート、ポール、張り綱は本製品に付属していません。テント本体に付属しているパーツを使用してください。

Care

Improper care and storage can shorten the lifespan of this product.
To extend the lifespan of this product, please follow the recommendations below.

- Wash away stains and soiling with water. Avoid direct sunlight and allow to air dry in a cool well ventilated area. If stored wet or soiled, mold can grow and the fabric can start to prematurely deteriorate.
- Over time the product's water repellant treatment will deteriorate. To restore its water repellant abilities, reapply a water repellant spray (sold separately).
- Do NOT dry clean or wash in washing machine. This can damage the fabric.

Storage

- When storing for an extended period of time, store loosely in a well ventilated, cool, dry place out of direct sunlight. Tents, tarps, and shelters are not designed to be stored long term in their stuff sacks and should only be used for transport.
- To prevent deforming and damage, do NOT store near heat sources.

Disposal

- Please follow local regulations regarding waste disposal.

Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at our discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Specification

Measurements

- #1122493 Chronos Dome 1 Ground Sheet 92×212 cm
- #1122494 Chronos Dome 2 Ground Sheet 122×222 cm
- #1122495 Chronos Dome 4 Ground Sheet 202×232 cm

Materials

70-denier nylon taffeta (Urethane coating)

Compatibility

- Chronos Dome 1・2・4
- Thunder Dome 1・2
- Chronos Cabin 2
- Rera Dome 4

All product specifications and design are subject to change without prior notice.
Actual product specifications may vary.

mont-bell Co.,Ltd.

2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN
www.montbell.com

mont-bell

User's Manual

Chronos Dome Ground Sheet

Chronos Dome Ground Sheet


Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Description

This ground sheet is used to help protect the floor of Montbell's Chronos Dome series of tents. The sheet is made from a highly durable material which enables use in unfavorable terrain, such as areas with exposed rocks or muddy ground. The product can also be used with the poles and rainfly to form a self-standing or a simple tarp.

Components

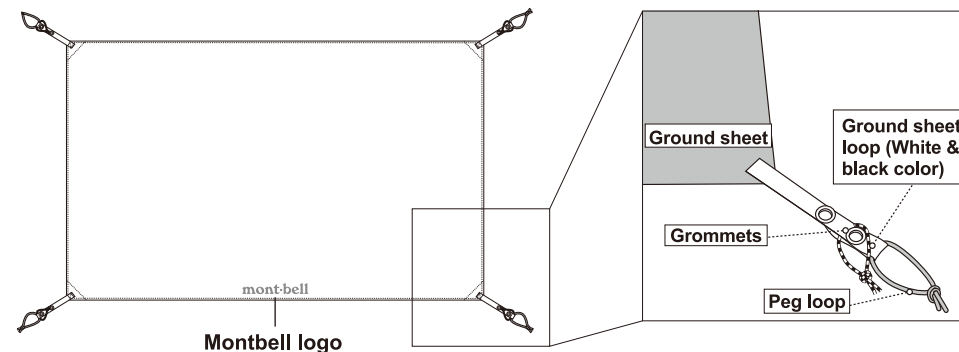

Includes

Ground sheet

※ Tent sold separately.

Stuff sack

User's manual

Safety Warnings

Please read carefully.



DANGER!

Under certain conditions, use of this product can result in major injury or death.

- NEVER place a flame source in or near your tent, tarp, or shelter. Injury or death by fire and/or carbon monoxide poisoning is possible.
- Follow instructions of the campsite management for evacuation in severe weather conditions, such as typhoons, lightning, strong winds, heavy rains, or heavy snowfall.
- When setting up near river beds and rivers, always be aware that waters may rise depending on the weather conditions.



WARNINGS!

Under certain conditions, use of this product can result in injury, death, or property damage.

- Always check the safety of the surrounding environment and weather conditions when setting up.
- Choose an area that is as flat as possible with good drainage when setting up.
- Do NOT modify or alter this product. Improper modifications and alterations can damage the product and impair functionality.
- Prior to use, check the product's condition and stop using immediately if you notice any deterioration from age/use, damage or irregularities.
- Please follow recommended care and storage instructions. Improper care and storage can lead to decrease in performance.



CAUTION!

Under certain conditions, use of this product can result in injury or property damage.

- Be careful of lightning in the mountains, when close to trees or in open fields.
- Only pitch tents, tarps, and shelters in areas designated for camping.
- Choose a campsite free of danger and as level as possible.
- Use pegs and guylines to stake your tent, tarp, or shelter at all times. Pegs may not be suitable for all ground conditions, such as sand or snow. Before pitching, check ground conditions to see if staking pegs is possible.
- Ultraviolet rays from the sun can damage the product's fabric. Sulfur gas from natural hot springs can also shorten the product's lifespan.
- Before using the tent, tarp, or shelter for the first time, practice pitching at home to familiarize yourself with the product and its features.
- Do NOT allow children to assemble the poles and stake pegs.

Prior to use, inspect this product for:

- ☐ Cracks or damage to Grommets ☐ Tears or damage to the fabric

Directions

When used under a tent

- ① Assemble the tent according to the user's manual.
 - ② Remove the product from the stuff sack and spread out on the ground with Montbell logo facing up. Align the Montbell logo and the entrance of the tent (see Fig. A).
 - ③ Place the tent on top of the ground sheet. Insert the 4 poles of the assembled tent into the ground sheet's grommets and fix the pegs. (see Fig. B)
- ※ In regular, dry conditions insert the pole ends into the outer grommets. In wet conditions where the fabric can sag, insert the pole ends into the inner grommets.
- ※ When staking Chronos Dome 2 Ground Sheet with Chronos Cabin 2, adjust the ground sheet's peg loop to the Chronos Cabin.

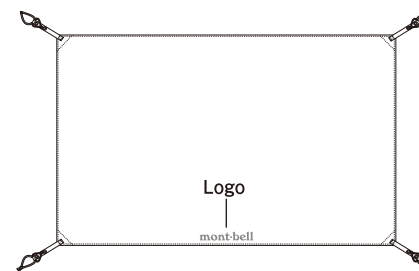


Fig. A

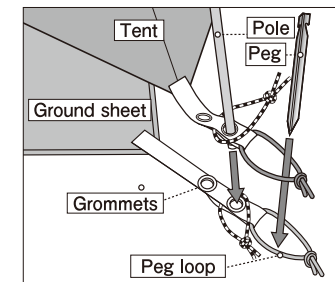


Fig. B

For use as a tarp

- ① Remove the product from the stuff sack and spread out on the ground.
 - ② Assemble poles and insert into the grommets located at the four corners.
 - ③ Attach the rainfly's four hooks to the ground sheet's loops (see Fig. C).
- ※ When using as a tarp with the tent's rainfly and poles, use a rope or other piece of cordage to secure the poles where they intersect.



※ Chronos Dome Tent 2 rainfly and poles are shown in the picture above.

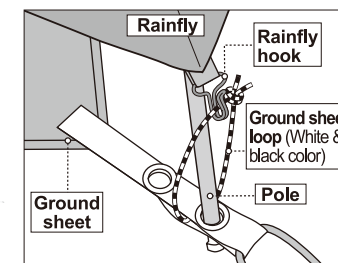


Fig. C

Rainfly, poles, guylines are sold separately. Use the parts included with the tent.