

mont·bell

取扱説明書

ギアホルダー

Gear Holder

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます)は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。なお、ご不明な点等ございましたら、販売店もしくは(株)モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

■ 特長

本製品はスノーギアをバックパックに装着するためのホルダーです。中央部は12本爪アイゼンなどを簡単に着脱できます。バックパックとの間にはスノーショベルやスノーシューを装着できます。
※本製品は単体では使用できません。

■ 各部の名称



■ 安全上の注意 必ずお読みください

注意 人が傷害を負ったり物的損害の発生が想定される内容です。


- フィールドに行く前にバックパックに取り付けて、正しく機能するか確かめてください。
- 正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発揮できない恐れがあります。

■ 使用前の点検 使用にあたっては、毎回必ず次のことを確かめてください。

- テープにほつれなどがいないか
- バックルが正しく機能するかどうか


■ 使用方法

○ バックパックへの取り付け方法

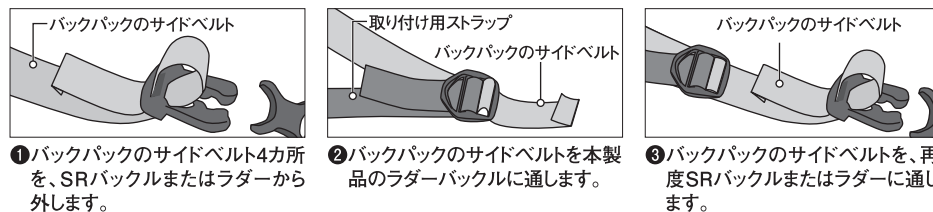


- ① バックパックのサイドベルト4カ所を、SRバックルまたはラダーから外します。
- ② バックパックのサイドベルトを本製品のラダーバックルに通します。
- ③ バックパックのサイドベルトを、再度SRバックルまたはラダーに通します。

○ アイゼンの取り付け方法

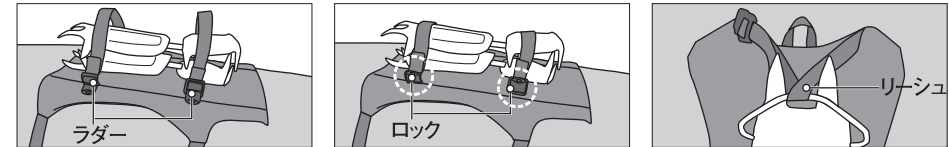

- ① 中央2カ所のラダーを緩め、アイゼンを置きます。
- ② テープを引き、ラダーのロックを留めます。
- ③ 先端のショベル用リーシュなどを使い、脱着を防止します。

○ ショベル、スノーシューの取り付け

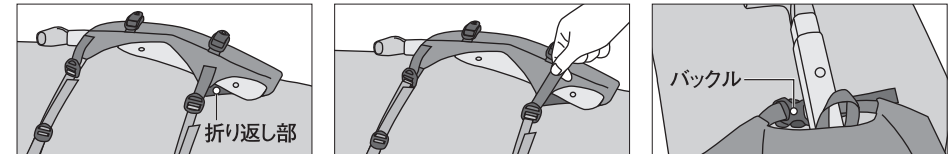

- ① バックパックと本製品の間には挟みます。脱着防止のために本製品下部の折り返し部に挟んでください。
- ② サイドベルトを引きます。
- ③ 先端のショベル用リーシュなどを使い、脱着防止のためのリーシュを取ります。

○ ピッケルの取り付け

本製品をバックパックに取り付けると、バックパックに付属しているピッケルホルダーが隠れるため、ピッケルホルダーを本製品のピッケルホルダー用ループに付け替えてご使用ください。
※一部付け替えられないモデルがあります。



■ お手入れ方法 間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。使用後や保管時は以下の点を参考にしてください。

- ご使用後は水洗いをして泥などを落とし、乾燥させてください。汚れがひどい時は中性洗剤で洗い、よくすすいでください。

■ 保管方法

- 保管場所は直射日光の当たらない風通しの良い場所を選んでください。

■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理をさせていただきます。

■ 仕様

品番: #1123941 品名: ギアホルダー

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

mont·bell

User's Manual

Gear Holder

Gear Holder

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.


If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Description

This gear holder is great for attaching snow gear to the outside of your backpack. You can easily use the middle section for 12 point crampons. You can also use the space created between the gear holder and backpack to store larger items, like a snow shovel or snowshoes.

This product cannot be used by itself.

Features

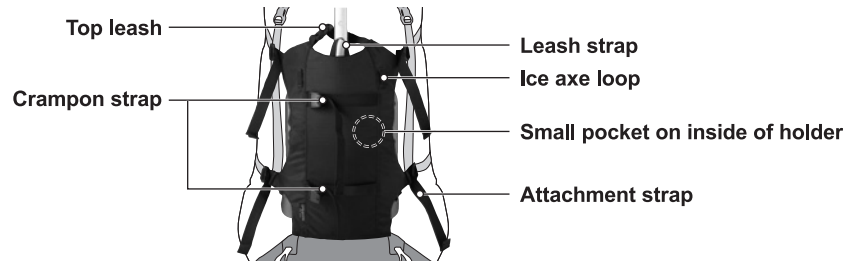

Safety Warnings! Please read carefully.

WARNING! Under certain conditions, use of this product can result in injury, death, or property damage.


- Before heading into the outdoors, attach the gear holder to your backpack and make sure it is attached correctly.
- Please follow recommended care and storage instructions. Improper care and storage can lead to decrease in performance.

Prior to use, inspect this product for:


- Damage or fraying on the straps.
- Buckles are working properly.

Directions


Attaching to the backpack

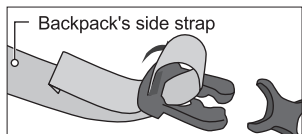

1 Unbuckle the backpack's side strap and unloop the strap from the buckle or strap adjuster.

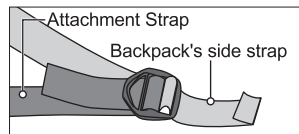


2 Loop the backpack's side strap through the Gear Holder's strap adjuster.

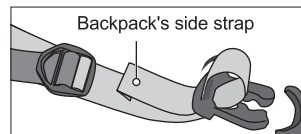


3 Loop the backpack's side strap back through the buckle or strap adjuster.

1


Attaching crampons

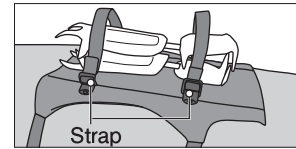

1 Loosen the two straps and insert crampons between the straps and Gear holder.

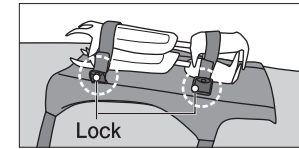


2 Secure the straps and then lock the strap adjusters.

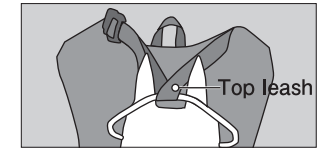


3 To prevent the crampons from accidentally falling out of the straps, loop the top leash around the crampons.


Attaching snowshoes or shovel

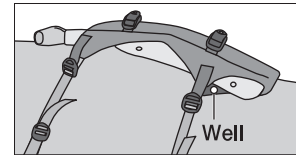

1 Insert in the space between the backpack and the Gear Holder. To prevent from falling, insert the ends into the Gear Holder's bottom well.

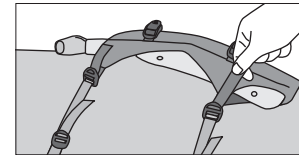

2 Adjust the straps.

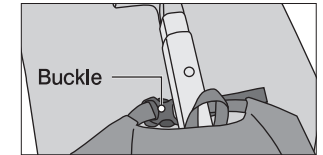


3 To prevent from accidentally falling out of the straps, loop the top leash around your gear.

Attaching ice axe

Because the Gear Holder covers the backpack's ice axe loop, use the Gear Holder's ice axe loop in its place.

*Cannot be used in combination with some models.

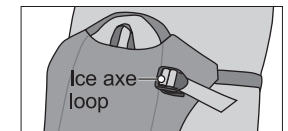

Care

Improper care and storage of your backpack can shorten its lifespan. Follow the recommendations below to extend the lifespan of your backpack.

- Wash away stains and soiling with water. Avoid direct sunlight and allow to air dry in a cool well ventilated area. If heavily soiled, use a mild detergent and rinse well.

Storage

- Store in a well ventilated, cool, dry place out of direct sunlight.

Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at our discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Specifications

Style#:1123941 Name:Gear Holder

Others

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

mont·bell Co.,Ltd.

2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN

www.montbell.com

2

44-2128-1604