

mont·bell

取扱説明書

2-Way ピッケルリーシュ

2-Way Ice Axe Leash


この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます)は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。ただし、本説明書は本製品の基本的な使用方法を示すものです。安全な条件のもとで十分な練習を行い、正しい使用方法を習得してください。なお、ご不明な点等ございましたら、販売店もしくは(株)モンベル カスタマーサービスまでお問い合わせください。本説明書は大切に保管してください。

■ 特長


本製品は、ハンドタイプとショルダータイプの2通りの使い方ができるピッケルリーシュです。

■ 各部の名称

ハンドリーシュ

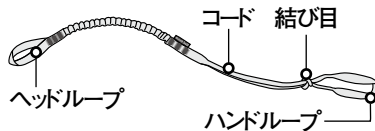

ショルダーループ

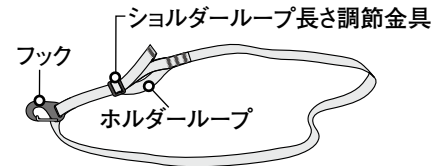

■ 安全上の注意

必ずお読みください

危険 人が死亡または重傷を負う危険が差し迫って生じることが想定される内容です。

- 登山は常に潜在的な危険をはらんでいます。たとえ用具の正しい選択、使用、お手入れ、保管を行なっても傷害や死亡事故などに至る危険性を完全に排除することは出来ません。個人の責任において登山を行なってください。(株)モンベルでは本製品の誤った使用に起因する損害や傷害、死亡事故に対していかなる責任をも負いません。

警告 場合により人が死亡または重傷を負う可能性が想定される内容です。
軽傷または物的損害が発生する頻度が高いことが想定される内容です。

- クライミング時の確保など、リーシュとしての目的以外での使用は絶対にしないでください。
- 本製品はピッケルの流れ止めとして開発されたものです。ハーネスやスリングなどの登攀用具ではありません。大きな荷重や強い衝撃がかかった場合破損する恐れがあります。
- 本製品の改造や分解などは絶対にしないでください。性能が損なわれ、十分な強度が発揮できない恐れがあります。
- 使用前は毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合は直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。

注意 人が傷害を負ったり物的損害の発生が想定される内容です。

- 正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発揮できない恐れがあります。

■ 使用前の点検

使用にあたっては、毎回必ず次のことを確かめてください。
異常が見られた場合は使用しないでください。

☐ テープに焼け、切れ目、縫い目のほつれなどがないか

☐ 調節金具に破損などがないか

■ 使用方法

■ ピッケルへの装着

①ピッケルのヘッドにハンドリーシュのヘッドループを通します。




②ヘッドループにハンドルループを通して固定します。




■ハンドリーシュ使用時

●ハンドループの輪の大きさの調節



ハンドループの輪が手首から抜け落ちない大きさになるように、結び目をゆるめたり位置を動かします。

●手首への装着 指を広げる

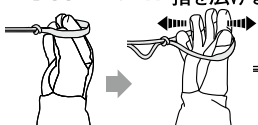

ハンドループの輪に手を下から入れます。指を開いて輪を押し広げ、手首まで通してください。

●ハンドループの外し方




手首を引いて結び目を締め、ループの位置を固定します。

反対側の手で結び目を押さえながら手首を引き、輪を広げて手首をループから抜き取ってください。

○ハンドループの結び目が解けた場合

ハンドループの結び目が解けた場合は、下記の通り結び直してください。




①ハンドループのコードが長い側を半回転ひねって輪を作ります。



②①でつくった輪にハンドループの端を上から通し入れて結び目を作ります。



③ループの輪が手首から抜け落ちない大きさになるように結び目の位置を動かします。



④結び目をきつく引き締めてください。

■ショルダーリング使用時

①ショルダーストラップを体に掛け、長さ調節金具で長さを調節します。



②ハンドリーシュをピッケルに装着した状態で、ショルダーリングのフックをハンドループに掛けます。



③ピッケルを使用しないときは、ホルダーリングにピッケルのシャフトを通して掛けると、両手が自由に使えます。



■お手入れ方法

間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。使用後や保管時は以下の点を参考にしてください。

○ご使用後は、真水で汚れを洗い流してから陰干しをしてください。汚れがひどい場合はぬるま湯と洗剤で洗い、洗剤が残留しないよう充分にすすぎを行ってください。

■保管方法

○直射日光の当たらない風通しの良い場所を選んでください。

○本製品を火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。

■廃棄方法

○廃棄方法はお客様の自治体の収集方法に従ってください。

■アフターサービス

お問い合わせいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お問い合わせいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■仕様

品番：#1134398 品名：2-Way ピッケルリーシュ

■その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

mont·bell

User's Manual

2-Way Ice Axe Leash

2-Way Ice Axe Leash

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.


If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

■ Description


Use as a hand leash or wrapped around the shoulder for easily switching hands.

■ Components

Hand Leash

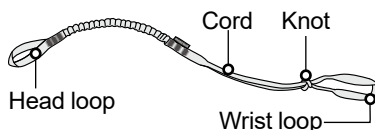

Shoulder Strap

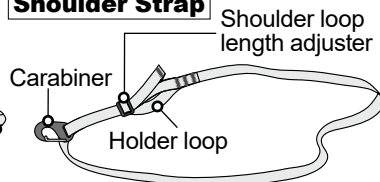

■ Safety Warnings

Please read carefully.



DANGER!

Under certain conditions, use of this product can result in major injury or death.

- Mountaineering is inherently dangerous activities. Even if this product is used, cared for, and stored correctly, it will not completely eliminate the risk of major injury or death. You are responsible for your own actions and decisions. Montbell Co., Ltd. is not liable for damages or accidents leading to injury or death resulting from improper usage.



WARNING!

Under certain conditions, use of this product can result in injury, death, or property damage.

- NEVER use this product for any purpose other than as an ice axe leash, such as using it as an anchor while climbing.
- This product is designed to prevent an ice axe from sliding away. It is NOT climbing equipment such as a harness or sling. May be damaged if subjected to a heavy load or strong impact.
- NEVER alter or modify the product in any way. May negatively affect the performance of the product.
- Prior to each use, check the product's condition and stop using immediately if you notice any deterioration from age/use, damage or irregularities. May impair performance.



CAUTION!

Under certain conditions, use of this product can result in injury or property damage.

- Follow recommended care and storage instructions. Improper care and storage may lead to a decrease in performance.

■ Pre-Use Inspection

Prior to every use, inspect this product for the following. Stop using immediately if you notice any irregularities.

☐ Burns, cuts, and frays on the straps

☐ Cracks in carabiner and adjuster

■ Directions

■ Attaching to an ice axe

- ① Pass the head loop through the head of the ice axe.




- ② Pass the leash through the head loop and pull to secure.




■ Using the hand leash

● Adjusting the size of the wrist loop



Loosen the knot and slide it to adjust the wrist loop so it fits securely around your wrist.




Once the loop is adjusted to the proper size, tighten the knot firmly.

● Securing to the wrist




Insert your hand upward through the loop. Spread your fingers to open the loop, then slide it over your hand to the wrist.

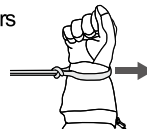

Pull your wrist to tighten the knot and fix the loop in place.


● Taking off the wrist loop

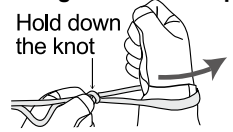


While holding down the knot with your other hand, pull your wrist to open the loop, then remove your wrist from the loop.

○ If the knot of the wrist loop comes undone

If the wrist loop knot loosens, retie it as described below.




1 Twist the longer side of the cord halfway around to form a loop.



2 Pass the end of the wrist loop through the loop made in 1 to form a knot.




3 Adjust the position of the knot so it fits securely around your wrist.




4 Pull and tighten the knot firmly.

■ Using the shoulder strap


1 Sling the shoulder strap over your body and adjust the length using the length adjuster.

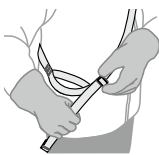

2 With the hand leash attached to an ice axe, hook the shoulder strap's carabiner onto the wrist loop.

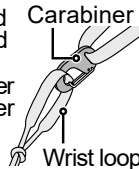

3 When the ice axe is not in use, passing its shaft through the holder loop allows you to keep both hands free.

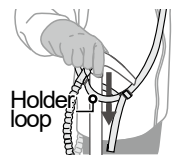

■ Care

Improper care and storage of this product can shorten its lifespan.

Follow the recommendations below to extend the lifespan of your product.

○ After use, rinse off any dirt with fresh water and dry thoroughly in shade. For heavy soiling, wash with lukewarm water and soap, and rinse thoroughly to ensure that no detergent residue remains.

■ Storage

○ Store in a well-ventilated place out of direct sunlight.

○ Do NOT place the product in a place where it will be exposed to high temperatures such as near a fire or heater. May cause deformation or damage.

■ Disposal

○ Follow local rules and regulations for proper disposal.

■ Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at Montbell's discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

■ Specifications

Style# : 1134398 Name : 2-Way Ice Axe Leash

All product specifications and design are subject to change without prior notice.

Actual product specifications may vary.

mont-bell Co.,Ltd.

2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN

<https://www.montbell.com/>