

取扱説明書

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます)は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。

なお、ご不明な点等ございましたら、販売店もしくは(株)モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

■ 特長

本製品は素早く出し入れしたいカメラ機材と、登山用品を分けて収納できる2気室仕様の軽量パックです。日帰り撮影山行に適した25Lサイズと、小屋泊まりの撮影山行にも対応する容量を備えた35Lサイズからお選びいただけます。バックカバー付き。

■ 各部の名称 / 機能説明



1 カメラ機材用の気室を取り出しやすい上部に設けています。カメラ用の上部気室には別売の「プロテクションバックインバッグ(※1123854)」がぴったりと収まるため、機材をより安定して運ぶ際に大変便利です。

2 トップリッドの裏側にはホコリを嫌うアイテムの収納に適したポケットを搭載しています。

3 本体中央には三脚ホルダーを搭載。長い三脚を装着する際は、振れを防止するベルトをトップリッドのポケットから取り出して固定してください。

4 下部の荷室にそれぞれ個別にアクセスできるジッパーをバックサイドに搭載。三脚を取り付けたままでも荷物の出し入れが可能です。

5 水筒やトレッキングポールの収納に便利なストレッチ素材を使用したポケット




6 背面はフォームをブロック状に配置し、優れた通気性を実現。

7 本体底部にリーシュ付きレインカバーを内蔵。急な雨にもスピーディーに対応可能。固定用のフック付き。※完全防水ではありません。機材を守るために別途防水対策をしてください。



■ 機材収納例

カメラ機材は取り出しやすい上部に収納できます。また、2気室でありながら本製品内部にある隔壁のドローコードを緩めることで長尺物が入る1気室のバックとしても使用することができます。※収納例は目安ですので、機材の大きさによっては入らない場合があります。

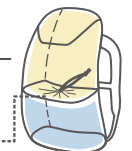


35L モデル

カメラ機材用 上部気室

- 中型一眼レフカメラ × 1
 - レンズ × 2~3
 - ハンディストロボなど × 1
- ※別売の「プロテクションバックインバッグ」を収納可能です。

装備用 下部気室収納例

- レインウェア
- クックウェア
- スリーピングバッグ
- 食料など

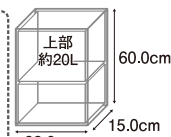


25L モデル

カメラ機材用 上部気室

- 小型一眼レフカメラ又は、ミラーレス一眼カメラ × 1
 - レンズ × 2~3
 - ハンディストロボなど × 1
- ※別売の「プロテクションバックインバッグ」を収納可能です。

装備用 下部気室収納例


- レインウェア
- クックウェア
- 食料など

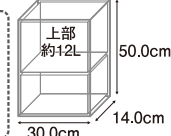

快適に背負うために

35L モデルのみ

バックがジャストフィットしている状態とは、バックパネルとショルダーハーネスが体に隙間無く接している状態のことをいいます。ご使用にあたっては、ご自身の背面板に合わせて、適切なフィッティングを行ってください。

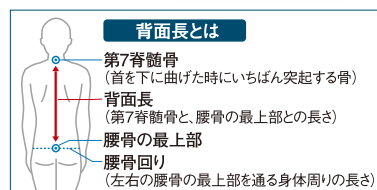

1 ヒップベルト・ショルダーストラップの位置を決める。

あらかじめ、各バックルに通したテープ類は適度に緩めておきます。また、体のラインを明確にするため、できるだけ薄着での作業をおすすめします。

1 使用時に近い状態を再現するため、5kg程度の荷物をバックに入れます。

2 ショルダーストラップを引いて、肩から脇にかけてショルダーハーネスが密着するようにします。



2 3Dフィット・ステア(内蔵フレーム)を調節する。

1 バックを背負い、ヒップベルトとショルダーストラップを締めた状態で、背中和バックの間に隙間がないか、鏡に映して確認します。(他の方に手伝っていただくヒューズに進めることができます。)

2 すき間があるようなら、3Dフィット・ステアをバックから取り出し、脚などを使って曲げ具合を調節します。一度に大きく曲げるのではなく、少しずつ曲げるのがコツです。

3 3Dフィット・ステアをバックに戻し、手順**1**からやり直します。



3 スタビライザーを調節する。

スタビライザーは、バックの揺れを抑え、体に引き寄せる機能も持ちます。

1 ショルダースタビライザーを引きます。このとき、**①**のバックルが肩の一番高い所より少し前になるように調節してください。

2 ヒップスタビライザーを引いて、バックを引き寄せ、チェストサポートを鎖骨から約5cmぐらい下で留めます。



注意 本製品は緩衝材を設けていますが、強い衝撃から内容物を保護する物ではありません。

■ お手入れ方法

- 背面の汗による汚れや泥の汚れは水で軽く洗い流した後中性洗剤を含ませたスポンジでブラッシングをし、洗剤を洗い流してから陰干ししてください。
- 長期の使用により、撥水性能(水を弾く力)が低下した場合は別売のS.R.スプレー等の撥水スプレーをご使用ください。
- ドライクリーニングや洗濯機による洗濯はしないでください。生地を傷める恐れがあります。

■ 保管方法

- 風通しの良い場所に保管してください。
- ガリリンやシンナーと一緒に保管しないでください。

■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■ 仕様

#1123845
フォトウォーカーパック 25
【容量】25L

#1123846
フォトウォーカーパック 35
【容量】35L

素材 330デニール・ナイロン・リップストップ [ウレタン・コーティング]
210デニール・ナイロン・ダブルリップストップ [ウレタン・コーティング]

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

株式会社 **モンベル** 本社 〒550-0013 大阪府西区南町2-2-2
商品についてのお問い合わせはカスタマー・サービスまで
Tel. 06-6531-3544 フリーコール: ☎ 0088-22-0031
モンベルホームページ <http://www.montbell.jp>

User's Manual

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Description

This lightweight middle sized pack has a slender profile and simple design. Well suited for hiking and trekking, but equally viable as a mountaineering pack.

Components / Features



35L

- 1 Load lifters (35L model only)
- 2 Shoulder harnesses
- 3 Sternum strap
- 4 Shoulder straps
- 5 Hipbelt stabilizers (35L model only)
- 6 Hipbelt
- 7 Hipbelt straps

1 The upper compartment is designed to pack camera gear and be easy to access. It is also sized to fit the Protection Pack in Bag (#1123854, sold separately) if additional cushioning for your camera gear is necessary.



3 Pocket for carrying a tripod on the back middle of the pack. For larger tripods, there is a belt in the top lid for securing the top of the tripod.



2 The top lid has an inner pocket for packing items that require protection from dust.



4 Side entrance for accessing gear in the lower compartment. The side entrance allows for access without having to remove a tripod.



5 Stretch side pockets for storing trekking poles or a bottle of water.



7 Stow-away rain cover with leash at bottom of the pack. Can quickly be thrown over the bag in case of sudden rain. Attach securely using the buttons on the shoulder harnesses.




6 Molded blocks of foam create air channels on the back panel for superior breathability.

*This product is NOT completely waterproof. If complete waterproofing is required, try different methods.

Packing Examples

Camera gear can be packed in the top compartment for easy access. If necessary, adjust the draw cord separating the 2 compartments to convert to a single compartment to hold longer items.

*Packing examples are only recommendations. Camera gear may not fit due to size or shape.



35L model


Upper compartment: Camera Gear

- 1x medium sized SLR camera
- 2-3x lenses
- 1x flash

*Fits Protection Pack in Bag (sold separately)

Lower compartment: Supplies

- Rain shell
- Cookware
- Sleeping bag
- Food, etc.

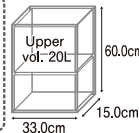

*Interior measurements

25L model


Upper compartment: Camera Gear

- 1x small sized SLR camera or mirrorless camera
- 2-3x lenses
- 1x flash

*Fits Protection Pack in Bag (sold separately)

Lower compartment: Supplies

- Rain shell
- Cookware
- Food, etc.

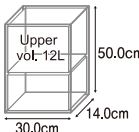


*Interior measurements

Maximizing Comfort

35L model only

Backpacks have a good fit when the back panel and shoulder harnesses are in complete contact with the body. Refer to the following instructions to adjust fit.

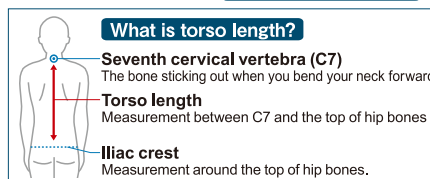

What is torso length?

Seventh cervical vertebra (C7)

The bone sticking out when you bend your neck forward

Torso length

Measurement between C7 and the top of hip bones

Iliac crest

Measurement around the top of hip bones.

1 Fitting

Before starting, unbuckle and loosen all straps. For a more precise fit, we recommend wearing light clothing to clearly define the shape of your back, shoulder and hips.

1 To simulate conditions during actual use, load about 5kg of weight into the backpack.

2 Pull the shoulder straps so that they tighten around your shoulders and armpits.



2 Shoulder the product and fasten the hipbelt, taking care not to put pressure on your abdomen and making sure the center of the hipbelt wraps around your hipbone.



2 Adjusting the 3D Fit Aluminum Frame

1 While wearing the backpack with hipbelt and shoulder straps adjusted, see a mirror to check if there are any gaps between the backpack, your shoulders and back. (Another person can make this step proceed more quickly).



2 If there are gaps, remove the 3D Fit Aluminum Frame from the backpack and use your thigh to make adjustments to the frame, bending it slightly. Make minor, gradual adjustments to the frame and avoid swift, major adjustments.



3 After replacing the 3D Fit Aluminum Frame, start over from step 1-2.

3 Adjusting load lifters and hipbelt stabilizers

Load lifters and Hipbelt Stabilizers keep the backpack closer to the body and prevent the backpack from shifting.

1 Pull the load lifters to draw the backpack's center of gravity in closer to your body. Pull the load lifters so that the buckle (A) is positioned just in front of the highest point of your shoulders.



Highest point of shoulder

2 Pull the hipbelt stabilizers to prevent the backpack from shifting left and right and fasten the sternum strap and adjust its position about 5cm below your collarbone to prevent the shoulder harnesses from shifting position.



CAUTION! This product uses cushioned materials but is not build to protect contents from strong shocks.

Care

Improper care and storage of your backpack can shorten its lifespan. Follow the recommendations below to extend the lifespan of your backpack.

- To clean stains and soiling, lightly rinse off and use a mild soap with a sponge to brush away any remaining residue. Rinse off and hang to dry in the shade.
- Water repellency will decrease over time. To restore water repellency, first clean any residues from the fabric surface and then apply a water repellent spray (sold separately).
- Do NOT dry clean or wash in a washing machine. These methods may damage the backpack's fabric.

Storage

- Store in a well ventilated, cool, dry place.
- Do NOT store together with corrosive materials.

Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at our discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Specifications

#1123845

Photo Walker Pack 25

Volume: 25L

#1123846

Photo Walker Pack 35

Volume: 35L

Material

330-denier urethane coated rip-stop nylon
210-denier urethane coated double rip-stop nylon

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

mont-bell Co.,Ltd.

2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN

www.montbell.com