

チャチャパック

共通取扱説明書

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書（以下「本説明書」といいます）は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。
なお、ご不明な点等ございましたら、販売店もしくは（株）モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。



■ 特長

大小さまざまなポケットを装備し、収納力に優れた1気室の中型バックです。トレッキングや1泊2日の小屋泊まり登山など、幅広い用途で使用していただけます。バックカバー付き。

■ 各部の名称／機能説明



- ①トップリッド底部に表からは見えないポケットを配置。
- ②後頭部があたりにくいトップリッドデザイン。
- ③手袋をしたままでも操作しやすいビッケルストラップ。
- ④フロントポケットと本体の間にジャケット等をはさんでおけるポケット。（30Lを除く）
- ⑤底面にバックカバーを内蔵。素早く取り出せ、ショルダーハーネスにホックで固定できるので、背面側にも雨が入りにくくなっています。
- ⑥荷物が少ないときに容量を調節でき、スキー板やストック類を素早く固定できるサイドリリースバックル（上部）を使用したベルト。
- ⑦小物の収納に便利なストレッチ素材を使用したポケット（両サイド）は2方向からアクセス可能。
- ⑧トップリッドを開閉せずに荷室にアクセスできるU字ジッパーを搭載。
- ⑨体格に応じて調節可能なチェストサポート。

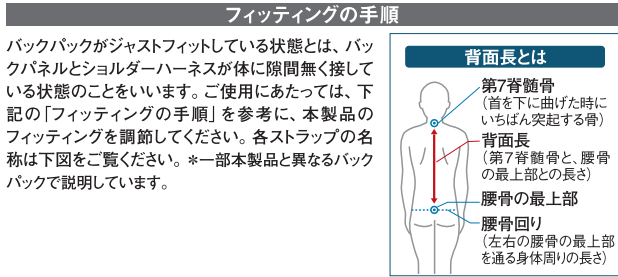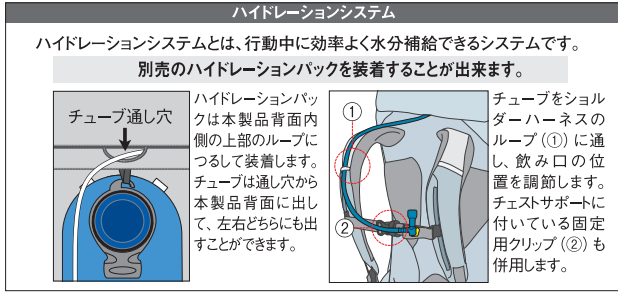

1 ヒップベルトの位置を決める。

あらかじめ、各バックルに通したテープ類は適度に緩めておきます。また、体のラインを明確にするため、できるだけ薄着での作業をおすすめします。

- ①使用時に近い状態を再現するため、10kg程度の荷物を本製品に入れます。
- ②本製品を背負い、腰骨の左右の引っ張りランバーパッドの中央部で包み込むようにしてヒップベルトを固定します。
- ③ショルダーストラップを引いて、肩から脇にかけてショルダーハーネスが密着するようにします。



フィッティングの手順

2 3D フィット・ステアーを調節する。

- ①本製品を背負い、ヒップベルトとショルダーストラップを締めた状態で、背中と本製品の間に隙間がないか、鏡に映して確認します。（他の方に手伝っていただくとスムーズに作業を進めることが可能です。）



背中と本製品の間に隙間がないかを確認します。

- ②すぎ間があるようなら、本製品から3D フィット・ステアーを取り出し、脚などを使って曲げ具合を調節します。一度に大きく曲げるのではなく、少しずつ曲げるのがコツです。



- ③3D フィット・ステアーを本製品に戻し、手順1-①からやり直します。

3 スタビライザーを調節する。

スタビライザーは、本製品の揺れを抑え、体に引き寄せる機能を持ちます。

- ①ショルダースタビライザー（30Lを除く）を引きます。このとき、⑥のバックルが肩の一番高い所より少し前になるように調節してください。
- ②ヒップスタビライザーを引いて底部の左右の揺れを防ぐ。
- ③ショルダーハーネスを安定させるためにチェストサポートを鎖骨から約5cmぐらい下で留めます。



以上で、本製品のフィッティングは完了です。ただし、各テープ類の長さは身に着けるウェアによっても変わりますので、その都度の微調整が必要です。苦しくない範囲でしっかり締めてください。

■ お手入れ方法

- 間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。使用後や保管時は以下の点を参考にしてください。
- 背面の汗による汚れや泥の汚れは水で軽く洗い流した後中性洗剤を含ませたスポンジでブラッシングをし、洗剤を洗い流してから陰干ししてください。
 - 長期の使用により、撥水性能（水を弾く力）が低下した場合は別売のS.R. スプレー等の撥水スプレーをご使用ください。
 - ドライクリーニングや洗濯機による洗濯はしないでください。生地を傷める恐れがあります。

■ 保管方法

- 直射日光のあたらない涼しい場所に保管してください。
- ガソリンやシンナーと一緒に保管しないでください。

■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備点がございましたら、お買い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■ 仕様

チャチャパック 30 【容量】30L	チャチャパック 35 【容量】35L	チャチャパック 45 【容量】45L
チャチャパック 30 女性用 Women's 【容量】30L	チャチャパック 35 女性用 Women's 【容量】35L	チャチャパック 40 女性用 Women's 【容量】40L
女性用は、機能、デザインはそのままだに、背面長、ヒップベルト、ショルダーハーネスを女性の体に合わせて設定しています。身長145～165cmくらいまでの方に最適なモデルです。		

素材 本体：100デニール・ナイロン・トリプルリップストップ「ウレタン・コーティング」
210デニール・ナイロン・リップストップ「ウレタン・コーティング」

※本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。
※本説明書中の説明で使用しているバックパックはイメージです。

株式会社 **モンベル** 本社 〒550-0013 大阪市西区新町 2-2-2
商品についてのお問い合わせはカスタマー・サービスまで
Tel. 06-6531-3544 フリーコール： ☎ 0088-22-0031
モンベルホームページ <http://www.montbell.jp>

User's Manual

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.



Description

This middle sized backpack has many large and small sized pockets for organizing your trail gear. Great for trekking or overnight trips, the Cha-cha Pack is an excellent multipurpose backpack. Stow-away rain cover included.

Features




- 1 A discrete internal zippered security pocket for storing small items.
- 2 Trapezoid shaped top lid delivers more head clearance for better vision and comfort.
- 3 Easy attachment loop for climbing tools.
- 4 Stretch pocket between main compartment and front zippered pocket.
- 5 "U" shaped large Front Loading Panel zips open for easy access.
- 6 Quick release compression straps allow you to address varying internal pack volume.
- 7 2-way accessible stretch mesh side pockets.
- 8 Stow-away rain cover inside the backpack for adjusting to sudden rain. Rain cover slips over the backpack and is attached to the shoulder harness via snap closures.
- 9 Sternum strap can be adjusted vertically to customize the shoulder harness.

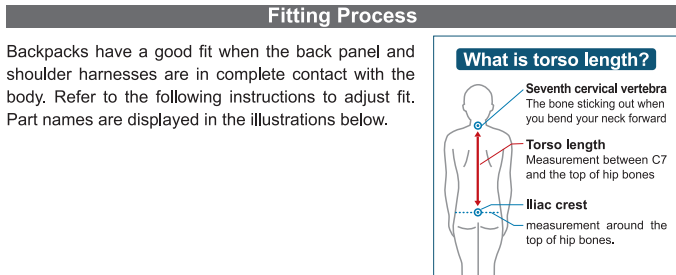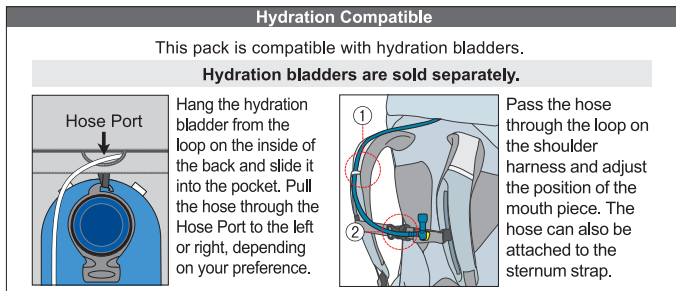

1 Fitting

Before starting, unbuckle and loosen all straps. For a more precise fit, we recommend wearing light clothing to clearly define the shape of your back, shoulder and hips.

- 1 To simulate conditions during actual use, load about 10kg of weight into the backpack.
- 2 Shoulder the product and fasten the hipbelt, taking care not to put pressure on your abdomen and making sure the center of the hipbelt wraps around your hipbone.
- 3 Pull the shoulder straps so that they tighten around your shoulders and armpits.

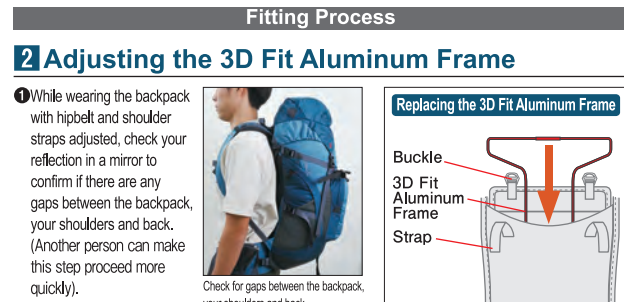


- 2 If there are gaps, remove the 3D Fit Aluminum Frame from the backpack and use your thigh to make adjustments to the frame, bending it slightly. Make minor, gradual adjustments to the frame and avoid swift, major adjustments.
- 3 After replacing the 3D Fit Aluminum Frame, start over from step 1-1.

3 Adjusting the stabilizers

Stabilizers will keep the backpack closer to the body and prevent the backpack from shifting.

- 1 Pull the load lifters to draw the backpack's center of gravity in closer to your body (except for 30L models). Pull the load lifters so that the buckle (A) is positioned just in front of the highest point of your shoulders.
- 2 Pull the hipbelt stabilizers to prevent the backpack from shifting left and right.
- 3 Fasten the sternum strap and adjust its position about 5cm below your collarbone to prevent the shoulder harnesses from shifting position.

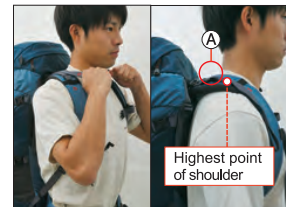

The fitting of your backpack is now complete. Depending on what you wear you may need to make minor adjustments to the shoulder straps, load lifters, and hipbelt straps. Fasten straps so that they are secure, but do not cause discomfort.

Care and Maintenance

Improper care and storage of your backpack can shorten its lifespan. Follow the recommendations below to extend the lifespan of your backpack.

- To clean stains and soiling, lightly rinse off and use a neutral detergent with a sponge to brush away any remaining residue. Rinse off and hang to dry in the shade.
- Water repellent abilities will decrease over time. To restore water repellency, first clean any residues from the fabric surface and then apply a water repellent spray (sold separately).
- Do not dry clean or wash in a washing machine. These methods may damage the backpack's fabric.

Storage

- Store in a well ventilated, cool, dry place.
- Do not store together with gasoline or paint thinner.

Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at our discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Specifications

Cha-Cha Pack 30 [Capacity] 30L	Cha-Cha Pack 35 [Capacity] 35L	Cha-Cha Pack 45 [Capacity] 45L
Cha-Cha Pack 30 Women's [Capacity] 30L	Cha-Cha Pack 35 Women's [Capacity] 35L	Cha-Cha Pack 40 Women's [Capacity] 40L
Without changing design or functionality, the hipbelt, shoulder harnesses, and back length have been adjusted to better fit the female form. This model is ideal for heights between 145cm and 165cm.		

MATERIAL main : 100-denier urethane coated triple rip-stop nylon
210-denier urethane coated rip-stop nylon

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

mont-bell Co.,Ltd.

2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN

www.montbell.com