

## ■ 保管方法

- 高温になる場所を避け、風通しの良い場所に保管してください。
- ガソリンやシンナーと一緒に保管しないでください。

## ■ 廃棄方法

- 廃棄方法は住まいの自治体の収集方法に従ってください。

## ■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

## ■ 仕様・サイズ

【品番】	【品名】
#1133291	チャチャパック60
#1133292	チャチャパック50 Women's <span style="background-color: #cccccc; padding: 0 2px;">女性用</span>
#1133293	チャチャパック80
#1133294	チャチャパック70 Women's <span style="background-color: #cccccc; padding: 0 2px;">女性用</span>

女性用は、機能、デザインはそのままに、背面長、ヒップベルト、ショルダーハーネスを女性の体に合わせて設定しています。身長145～165cmくらいまでの方に最適なモデルです。

### 【素材】

正面：210デニール・ナイロン・リップストップ [ウレタン・コーティング]

側面・底部：420デニール・ナイロン・リップストップ [ウレタン・コーティング]

## ■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

# mont·bell

## 取扱説明書

# チャチャパック シリーズ

### Cha-Cha Pack Series

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書（以下「本説明書」といいます）は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。

なお、ご不明な点等ございましたら、販売店もしくは（株）モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

## ■ 特長

大容量ポケットや取り外してアタックザックとしても単体利用できるトップリッドを備えるなど、充実した機能性を持つ大型バックパックです。2、3泊程度のテント泊に適した60L(女性用は50L)とエクスペディションにも対応する80L(女性用は70L)をラインアップしています。

## ■ 各部の名称

\*写真は60Lです。



## ■ 安全上の注意 必ずお読みください

**警告** 場合により人が死亡または重傷を負う可能性が想定される内容です。軽傷または物的損害が発生する頻度が高いことが想定される内容です。

- 本製品の改造や分解などは絶対にしないでください。性能が損なわれ、十分に能力が発揮できない恐れがあります。
- 正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発揮できない恐れがあります。

**注意** 人が傷害を負ったり物的損害の発生が想定される内容です。

○使用前は毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合は直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。

## ■ 使用前の点検


使用にあたっては、毎回必ず次のことを確かめてください。異常が見られた場合は使用しないでください。

- 本体に破れがないか  バックルなどに破損がないか


## ■ 使用方法

### ○トレールウォーターパック(別売)取り付け方法

トレールウォーターパックは荷物を降ろさずに行動しながら水分補給ができる、チューブで給水するソフトタイプのボトルです。装着の際はトレールウォーターパック付属の取扱説明書も併せてご覧ください。

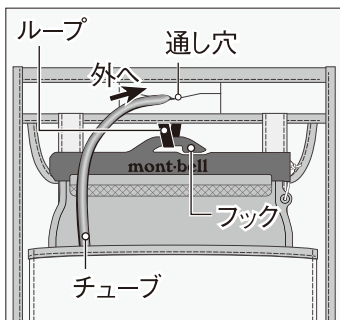

トレールウォーターパックのスライドパーツのフックを荷室内上部の図のループに掛けて装着し、図の通し穴からバックパックの外にチューブを出します。

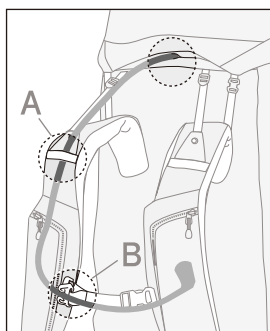


チューブをショルダーハーネスのループ(A)に通し、飲み口の位置を調節します。チェストサポートに付いている固定用クリップ(B)も併用します。

## ■ 背負い方

バックがジャストフィットしている状態とは、バックパネルとショルダーハーネスが体に隙間無く接している状態のことをいいます。ご使用にあたっては、ご自身の体格に合わせて、適切なフィッティングを行ってください。


本製品の各バックルに通したテープをあらかじめ適度に緩めておきます。また、実際の使用状態で正しいポジションを得るために、まず 10kg 程度の荷物をバックに入れます。

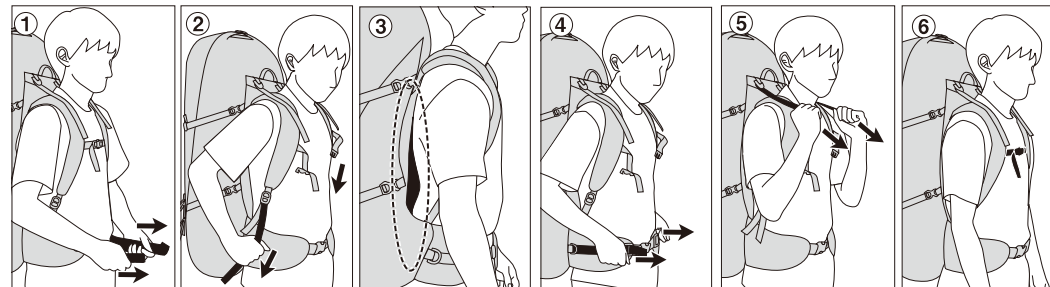

バックを背負い、腹部を圧迫しないように腰骨部分でヒップベルトを締める。  
 ショルダーハーネスが体にフィットするようにショルダーストラップを引く。  
 このとき、バックと背中との間に隙間があるようならフレームを調節してください。  
 ヒップスタビライザーを引いて底部の左右の揺れを防ぐ。  
 ショルダースタビライザーを引き、上部の重心を体に引き寄せ安定させる。  
 ショルダーハーネスを安定させるためにチェストサポートを留める。

### フレイムの調節

本製品に内蔵されているアルミフレームは、あらかじめ体の背面のカーブに合わせて曲げています。ほとんどの場合はそのままご使用いただけますが、本製品と体の間に隙間がある場合は以下の手順でアルミフレームを曲げてください。

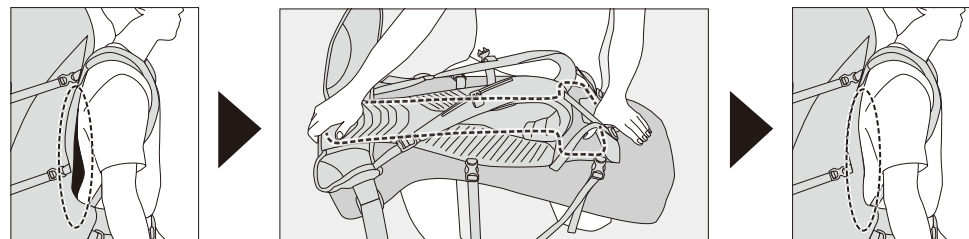

- 荷物を取り出して空荷の状態にして、本製品に内蔵されているアルミフレームを曲げます。体との隙間がなくなるように脚などを使って曲げていきます。
- ※アルミフレームは本製品から取り出さないで本体ごと曲げてください。
- ※一度に大きく曲げるのではなく、少しずつ曲げてください。
- アルミフレームの調節後、手順を①からやり直します。

以上で、本製品の基本的なフィッティングは完了です。ただし、各テープ類の長さは身に着ける服によっても変わりますので、その都度の微調節が必要です。苦しくならない範囲でしっかり締めてください。


## ■ お手入れ方法

間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。使用後や保管時は以下の点を参考にしてください。

- 背面の汗による汚れや泥の汚れは水で軽く洗い流した後に中性洗剤を含ませたスポンジでブラッシングをし、洗剤を洗い流してから陰干ししてください。
- ドライクリーニングや洗濯機による洗濯はしないでください。生地を傷める恐れがあります。
- 乾燥機を使用しないでください。熱で劣化し、製品の寿命を縮める恐れがあります。


### ○フィッティングの手順

#### 背面長の調節

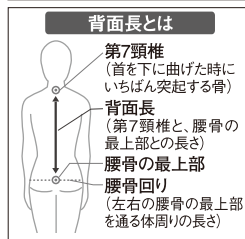


①左図を元にご自身の背面長を計ります。本製品のショルダーハーネスは下記の背面長に対応します。

Men's	Women's
S: ~51cm	S: ~46cm
M: 51~55cm	M: 46~50cm
L: 55cm~	L: 50cm~

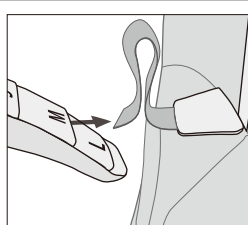


②左記の背面長に適合するショルダーハーネス位置を確認します。必要に応じてショルダーハーネス付け根のラダーバックルを緩め、ショルダーハーネスを外します。

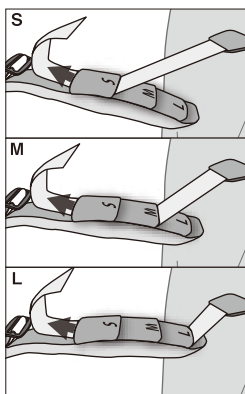

③ご自身のサイズに適合するショルダーハーネスのポケットに本体側のテープを左図のように通します。

- S: 51cm、•M: 51-55cm、•L: 55cm-  
 Women's  
 •S: 46cm、•M: 46-50cm、•L: 50cm-

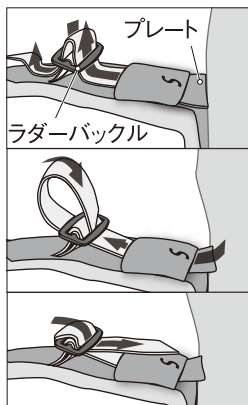

④テープは根元のプレートまでしっかり差込み、ラダーバックルに通します。

**注意** 使用中の緩みやズレを防止するため、余ったテープは右図のように折り返して再びバックルに通しておきます。浮きや余裕がないようにテープはしっかり引き切ってください。

## ■ Storage

- Store in a well ventilated, cool, dry place.
- Do NOT store together with gasoline or paint thinner.

## ■ Disposal

- Please follow local regulations regarding waste disposal.

## ■ Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at our discretion. This warranty does not cover damage caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

## ■ Specifications

[Style]	[Name]
#1133291	Cha-Cha Pack 60
#1133292	Cha-Cha Pack 50 Women's
#1133293	Cha-Cha Pack 80
#1133294	Cha-Cha Pack 70 Women's

Women's models feature the same design and functionality as Men's models, but with an adjusted hipbelt, shoulder harness, and back length to better fit the female form. Ideal for heights from 145cm to 165cm.

### [Material]

Main / Top lid : 210-denier urethane coated rip-stop nylon  
Side / Bottom : 420-denier urethane coated rip-stop nylon

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

mont-bell Co.,Ltd.

2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN  
<https://www.montbell.com/>

# mont-bell

## User's Manual

# Cha-Cha Pack Series

## Cha-Cha Pack Series

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.


If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

## ■ Description

Features a large main compartment, fully functional details, and a detachable top lid converting into a summit pack. Comes in a 60L size (50L for women) suitable for 2 to 3 night backpacking trips, and an 80L size (70L for women) suitable for longer trips and expeditions.

## ■ Components

\*60L model

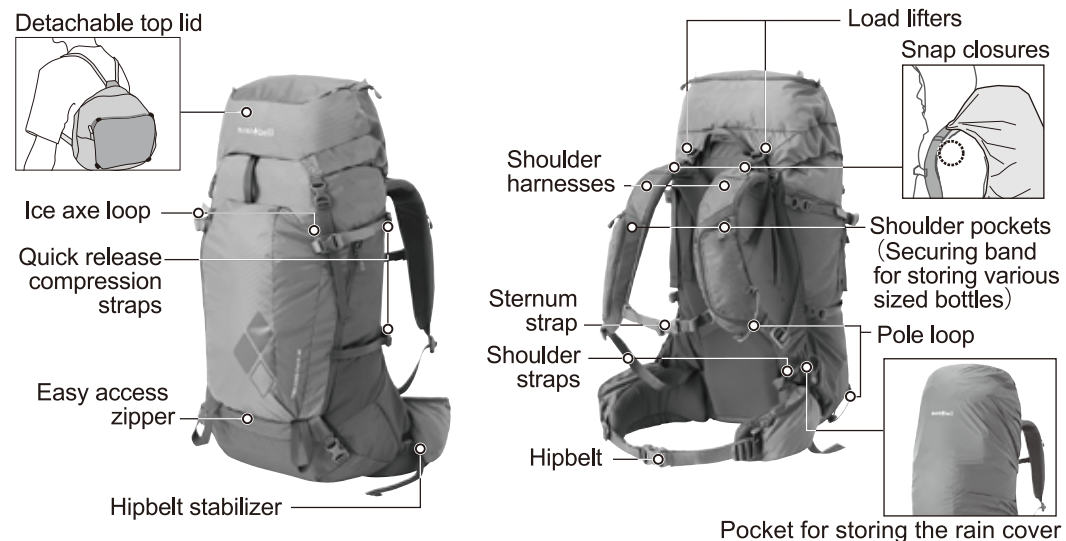

## ■ Safety Warnings! Please read carefully.



### WARNING!

Under certain conditions, use of this product can result in injury, death, or property damage.

- Do NOT modify or alter this product. Improper modifications and alterations can damage the product and impair functionality.
- Please follow recommended care and storage instructions. Improper care and storage can lead to a decrease in performance.



**CAUTION!** Under certain conditions, use of this product can result in injury or property damage.

○ Prior to use, check the product's condition and stop using immediately if you notice any deterioration from age/use, damage or other irregularities.


**Before using, check for;**

- Damage to the fabric     Damage to the buckles


**Directions**

○ This pack is compatible with the Trail Water Pack (sold separately)

A hydration bladder with a tube that allows you to drink while moving, without needing to put your pack down.  
When installing, also refer to the Trail Water Pack instruction manual.

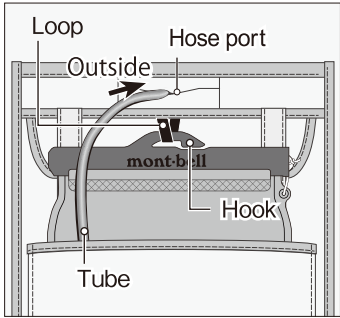

Hang the hook connected to the Trail Water Pack from the loop on the inner hook as shown in the figure.

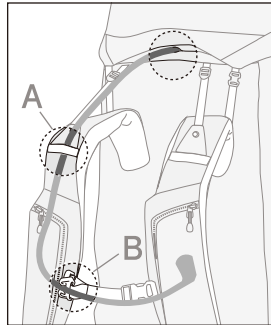

Pass the hose through the loop on the shoulder harness (A) and adjust the position of the mouth piece. The hose can be clipped on to the sternum strap (B).

**Fitting Process**

**Adjusting Back Panel Length**

**What is torso length?**


Seventh cervical vertebra  
The bone sticking out when you bend your neck forward

Torso length  
Measurement between C7 and the top of hip bones


Iliac crest  
Measurement around the top of hip bones.

① Change the shoulder harness position to match your torso length measurement (shown on the left). If necessary, loosen the ladder buckle to unfasten the shoulder harness.


- |             |             |
|-------------|-------------|
| 【Men's】     | 【Women's】   |
| S : ~51cm   | S : ~46cm   |
| M : 51~55cm | M : 46~50cm |
| L : 55cm~   | L : 50cm~   |

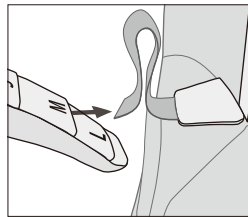

② Check the length of the shoulder harness that match your torso length. If necessary, loosen the shoulder harness straps and pull them off of the back panel plates.

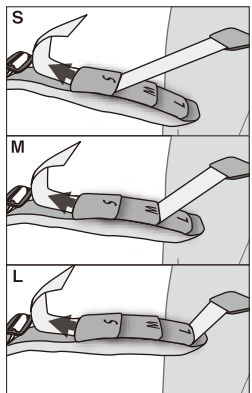

③ Thread the strap from the main body through the tab on the shoulder harness that corresponds to your size.

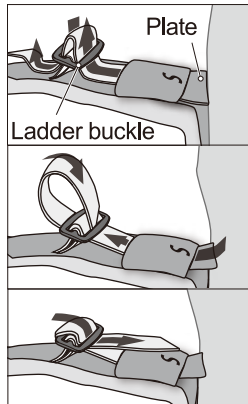


④ Pull the strap until the shoulder harness is firmly connected to the base plate, then pass the strap through the ladder buckle.

**CAUTION!** To prevent loosening or shifting of the strap during use, feed the excess strap back through the buckle again (as shown on the left). Make sure to pull the strap through tightly so that there is no loose points.

**Adjusting the stabilizers**

Before starting, unbuckle and loosen all straps. To simulate conditions during actual use, load about 10kg of weight into the backpack.

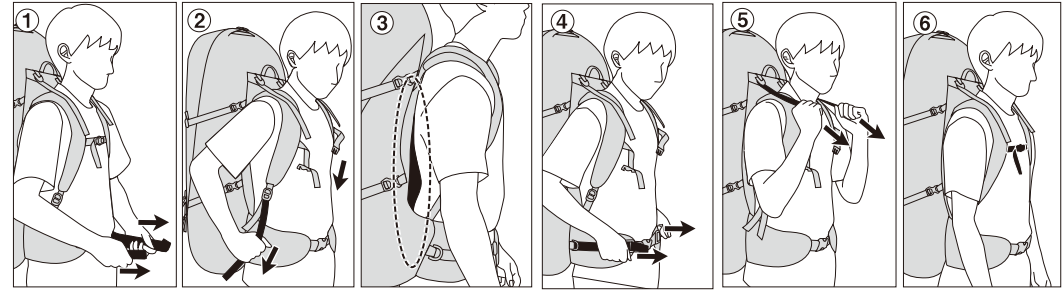

Shoulder the product and fasten the hipbelt, taking care not to put pressure on your abdomen.

Pull the shoulder straps so that they tighten around your shoulders and armpits.

If there are gaps between the backpack and your back, make adjustments to the 3D Fit Aluminum Frame.


Pull the hipbelt stabilizers to prevent the backpack from shifting left and right.

Pull the load lifters to draw the backpack's center of gravity in closer to your body.

Fasten the sternum strap and adjust its position about 5cm below your collarbone to prevent the shoulder harnesses from shifting position.

**Adjust the 3D Fit Aluminum Frame**

The 3D Fit Aluminum Frame inside this product has been pre-bent to fit the curve and shape of the back. In most cases, it can be used as it is. If there are any gaps between the backpack, your shoulders and back, please use the following instructions to make any necessary adjustments.

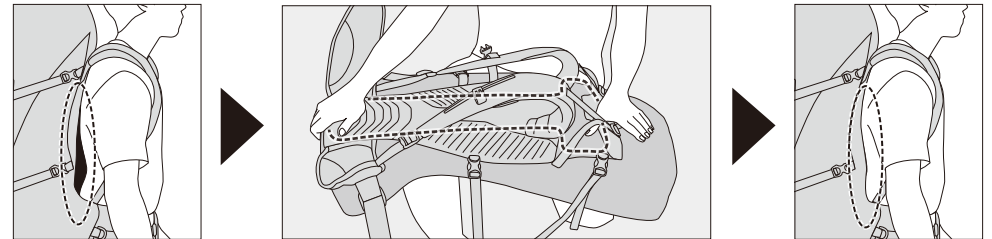

Remove all items inside the backpack and be sure to perform any adjustments when the backpack is empty. Check the location of the 3D Fit Aluminum Frame (see illustration below) and bend it while inside the backpack using your legs.

- Do not remove the 3D Fit Aluminum Frame.
- Make sure to bend the left and right sides of the frame at the same time.
- Make minor, gradual adjustments to the frame and avoid swift, major adjustments.

The fitting of your backpack is now complete. Depending on what you wear you may need to make minor adjustments to the shoulder straps, load lifters, and hipbelt straps. Fasten straps so that they are secure, but do not cause discomfort.

**Care**

Improper care and storage will shorten the lifespan of this product. Please review the following instructions for care and storage.

- To clean stains and soiling, lightly rinse off and use a mild soap with a sponge to brush away any remaining residue. Rinse off and dry in the shade. Do NOT dry clean. This can damage the product's fabric.
- Do NOT dry clean or wash in a washing machine. This can damage the product's fabric.
- Do NOT dry in a dryer. Shorten the product's lifespan.