

mont·bell

取扱説明書

ポケットタブル ベビーキャリア

Pocketable Baby Carrier

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書（以下「本説明書」といいます）は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しく調節し、固定箇所を確実に締めてご使用ください。

なお、ご不明な点等ございましたら、販売店もしくは（株）モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

■ 特長

携行に便利なポケットタブル仕様のベビーキャリアです。軽量・コンパクトながら、子どもをウエストで支える疲れにくい構造で、「抱っこ」と「おんぶ」の2通りの使い方ができます。ハイキングやお出かけなどで、歩き疲れた子どもの抱っこに最適です。通気性を備えた生地で快適性に優れ、汚れたら洗濯機で丸洗いができます。

適応範囲の目安

対面抱き	腰がすわって(6ヶ月位)～13kg(24ヶ月位)
おんぶ	腰がすわって(6ヶ月位)～15kg(36ヶ月位)

*一般的な月齢、体重、発育段階をもとに作成した適応範囲です。お子さまの発育には個人差がありますので、上記表示は目安としてください。

■ 各部の名称



1

■ 安全上の注意 必ずお読みください

⚠ 危険 人が死亡または重傷を負う危険が差し迫って生じることが想定される内容です。

落下に注意

- 本製品の着脱の際は、お子さまが落下しないように注意してください。
- 本製品を自転車やスキーなどのスポーツ時に絶対に使わないでください。お子さまが落下する恐れがあります。
- 本製品を使用して身体を傾ける際は、お子さまを手で支えてください。お子さまが前方に落下する恐れがあります。また、前屈みになる際は腰を曲げず、膝を曲げてください。また、大きく前屈みになる姿勢はとらないでください。お子さまが滑り落ちる可能性があります。
- 本製品は正しく調節し、固定箇所を確実に締めてください。また、使用中に腰ベルトのバックルを絶対にはずさないでください。お子さまが落下する恐れがあります。
- お子さまを本製品で抱いたまま抱き方を変更しないでください。お子さまが落下する恐れがあります。

窒息に注意

- 使用中は各ベルトを締めすぎず、お子さまの頭部が動かせる余裕を設けてください。お子さまが窒息する恐れがあります。
- 本製品の使用中はお子さまの気道をふさぐことがないよう、常にお子さまの状態に注意してください。

着脱時に注意

- 本製品を使用してお子さまを抱いたり、降ろしたりするときは、できるだけ慎重にゆっくりと行ってください。また、可能な限り低い姿勢を取り安全な場所で行ってください。他の人に手伝ってもらうなど、おんぶの際は特に注意してください。
- ご使用前には縫製や全てのバックル、ストラップがゆるみや損傷等が無く、正常に機能するか確認してください。特に固定用ベルトは必ず確認してください。一か所でも破損がある場合は絶対に使用しないでください。装着後も緩みがないか、都度確認してください。
- 対面抱きで使用する際はお子さまの頭で前方や足下の視界が妨げられないよう装着し、歩行中も注意してください。

⚠ 警告 場合により人が死亡または重傷を負う可能性が想定される内容です。軽傷または物的損害が発生する頻度が高いことが想定される内容です。

- 本製品の改造や分解などは絶対にしないでください。性能が損なわれ、十分に保護能力が発揮できない恐れがあります。
- 正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発揮できない恐れがあります。
- お子さまを乗せて本製品を必要以上に振ったり、揺すぶったりしないでください。お子さまが落下する恐れがあります。
- 使用中は本製品により、お子さまの腕や脚が圧迫されていないか注意してください。
- 本製品は、大人が背負うように設計されています。子どもが背負うと、事故の原因となる恐れがあります。

⚠ 注意 人が傷害を負ったり物的損害の発生が想定される内容です。

- 本製品は1人用です。2人以上のお子さまを乗せないでください。
- バックルの開口部にお子さまの指などが挟まれないように注意してください。また、使用していないときもバックルは差し込んだままにしてください。
- 使用中にお子さまが不快感を示した場合は、使用を中止してください。また、使用者の体調がすぐれないときや、身体に痛みを感じる際も使用は控えてください。
- お子さまの肌に本製品の跡がついたり肌がこすれて赤くなる場合は、露出部を服やタオルで覆い、本製品が直接接触しないようにしてください。
- ほ乳後30分くらいは本製品の使用を控えてください。お子さまのおなかを圧迫し、消化吸収の妨げになることがあります。
- 連続しての使用は2時間以内とし、お子さまの体調変化や装着状況を確認してください。
- 料理などの家事の際や、自転車に乗りながらの本製品のご使用は危険を伴いますので、使用は控えてください。

2

■ 使用前の点検

- 全てのバックル、ストラップや生地に破損が無いか
- 全てのバックル、ストラップが正常に機能するか
- 全てのストラップが適切な長さか
- 固定用ベルトは適切な位置にあるか


■ 使用前の準備

- 使用前にお子さまを乗せていない状態で装着手順を確認し、全てのストラップの位置や長さを適切に調節して正しく使用できることを確認してください。
- 「おんぶ」で使用される前は、「対面抱き」よりもストラップを長めに調節しておいてください。
- お子さまの身長に対して背当て部分が長い場合は、腰ベルトを高めの位置に装着してください。また、お子さまのお尻の下にタオルなどを敷き、お子さまの高さを調節してください。


■ 使用方法

○ 腰ベルトの装着方法

① 注意ラベルが使用者のお腹側になるように持ちます。

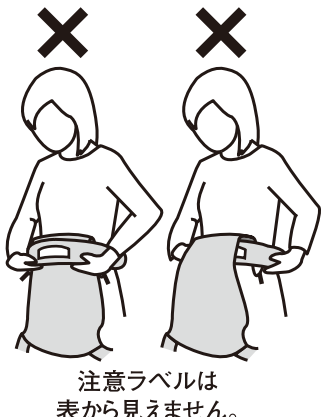


② ウエストへ本製品を装着します。バックルは下記の手順で留めてください。

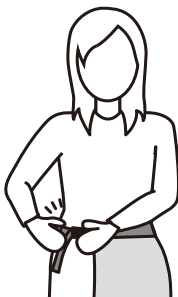


バックルの留め方


注意 外側のストラップの余りが長いと引っかかりによる転倒など、けがの恐れがあります。10cm以内に調節してください。

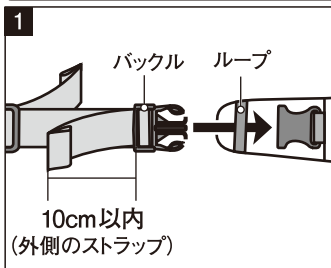

外側のストラップの余りが10cm以内になるよう調節し、バックルをループの下に通して留めます。
※留める際にカチッと音が鳴ることを確認してください。

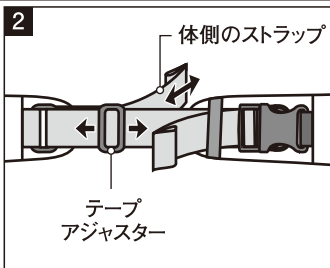


テープアジャスターと体側のストラップの位置関係を調節し、ストラップ全体の長さがウエストサイズに合うようにしてください。

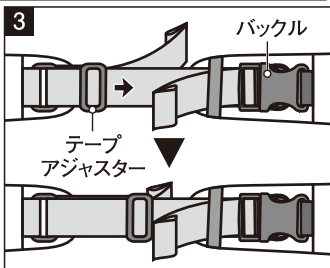

体側のストラップが余らないようにテープアジャスターのみを持ち、バックル側へ動かしてください。

○ 対面抱きでの使用方法

① 腰ベルトを装着します。

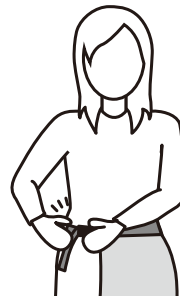

② お子さまを抱き上げ、両足を開脚させます。




③ 右手でお子さまを支え、左腕を左の肩ベルトに通します。




④ 左手で本製品の上からお子さまを抱き、右腕を右の肩ベルトに通します。




⑤ 固定用ベルトを留めます。

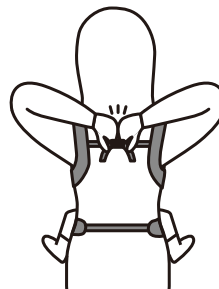

⑥ 固定用ベルトの長さを調節します。

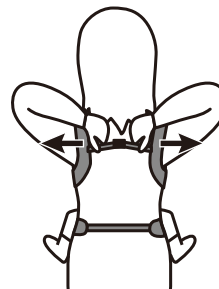

⑦ お子さまの腕が適切に出ていることを確認し、ストラップAを調節します。

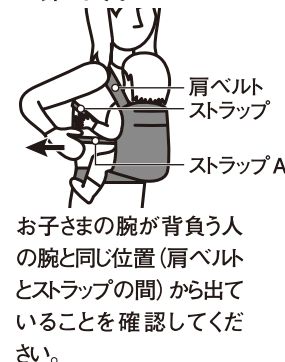


⑧ お子さまが本製品の中央下部で、安定しているか確認します。



○ 対面抱きからお子さまを降ろす方法

① 左手でお子さまを支えながら、右手で固定用ベルトのバックルを外します。

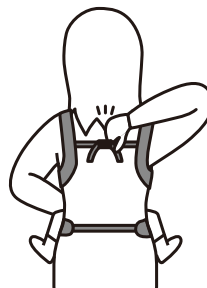

② お子さまを支えながら、左右の肩ベルトを肩から外します。



③ 両手でお子さまを安全な場所に降ろしてから、腰ベルトを外します。



○ おんぶでの使用方法

①本製品の腰ベルトを装着し、右側の腰に下げます。

※③で本製品を背面に回すため、腰ベルトは、少し緩めにしてください。

②お子さまを抱き上げ、右手で支え、左手で本製品をお子さまに被せます。







※お子さまが落下しないよう、注意してください。

③右手で本製品の上からお子さまを支えるように持ち替え、本製品を後方へゆっくと回して左手を左の肩ベルトに通します。

④右手でお子さまを支えながら、左手で右の肩ベルトを取り、お子さまを本製品で支え、右手を右の肩ベルトに通します。

④右手で本製品の上からお子さまを支え、左手で左の肩ベルトをはずします。

⑤両手でお子さまを安全な場所に降ろしてから、腰ベルトを外します。

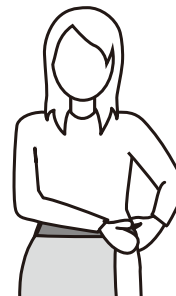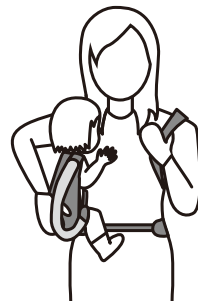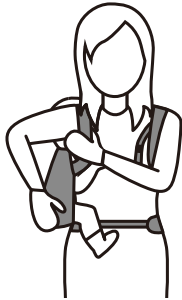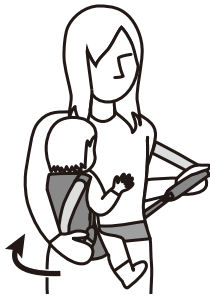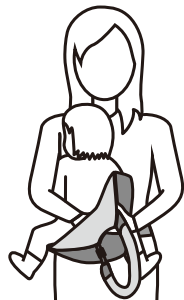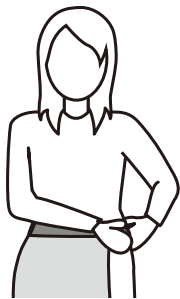

⑤右手で右の肩ベルトがずり落ちないように持ち、お子さまの位置を背面まで移動します。

⑥固定用ベルトを留め、固定用ベルトの長さを調節します。





⑦お子さまの腕が適切に出ていることを確認し、ストラップBを調節します。

⑧お子さまが本製品の中央下部に位置し、安定しているか確認します。

①頭当て収納ポケットから頭当てを取り出します。

②お子さまの頭を支えるように、頭当てを被せます。

③頭当てのフックを、肩ベルトの頭当て用ループに引っ掛け、テープの長さを調節します。

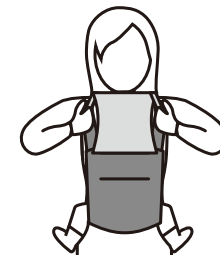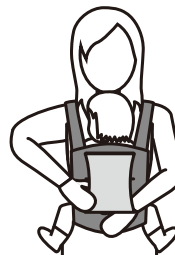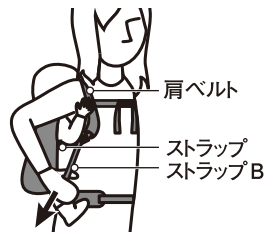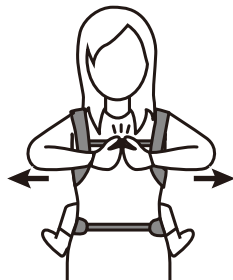

お子さまの腕が背負う人の腕と同じ位置(肩ベルトとストラップの間)から出ていることを確認してください。

○ 使用中の簡易収納方法

お子さまを抱っこしていない時に、本製品は腰に巻いたまま簡易にまとめておくことができます。

①肩ベルトを内側へ畳みます。

②図のように端から腰ベルトに向かって2回巻き上げます。



③テープアジャスターAを収納用ループの下側から通します。テープアジャスターAの裏側に収納用ループを引っ掛け、固定します。

○ おんぶからお子さまを降ろす方法

①ストラップBを緩め、固定用ベルトを外します。

②本製品を右の腰に回します。

③左手での右の肩ベルトを持ち、本製品でお子さまを支え、右腕を肩ベルトからはずします。

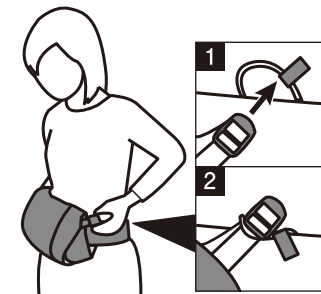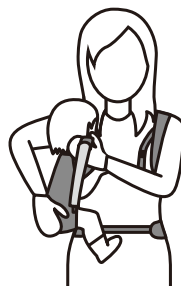

○ 大容量ポケットについて

- 夏は保冷材、冬はカイロなどを入れることができます。
- 本製品をポケットに収納することで、コンパクトに持ち運びができるポケットダブル仕様です。

■ お手入れ方法

間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。使用後や保管時は以下の点を参考にしてください。

- 洗濯機をご使用の場合は、ネットに入れてください。
- ドライクリーニングはしないでください。生地を傷める恐れがあります。
- 洗剤によっては蛍光増白剤が移染することがありますので、注意してください。
- ジッパーの動きが固くなりましたら、別売のスムーススライダーやローソクの口ウを塗ると回復します。

■ 保管方法

- 火や暖房器具のそばなど、高温になる所に置かないでください。変形や損傷の原因になります。
- 保管場所は直射日光の当たらない風通しの良い場所を選んでください。
- ガンソリンやシンナーと一緒に保管しないでください。

■ 廃棄方法

- 廃棄方法はお住まいの自治体の収集方法に従ってください。

■ アフターサービス

お問い合わせいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お問い合わせいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■ オプション(別売) 本製品は下記の別売のオプションを利用することができます。

- ポケットダブル ベビーキャリア レインカバー
ベビーカーにも対応する雨除けカバーです。
- ポケットダブル ベビーキャリア ウォーマー
ベビーカーにも対応し、お手入れも簡単な保温カバーです。

MEMO

■ 仕様

品番：1133382 品名：ポケットダブル ベビーキャリア 胴囲：(フリーサイズ)59～107cm
主素材：(表側)ナイロン (内側)ポリエステル

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

mont-bell

User's Manual

Pocketable Baby Carrier

Pocketable Baby Carrier

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

■ Features


Lightweight, compact and easy to transport, supporting your child's weight at your waist to prevent fatigue. Use it to carry a child in your arms or on your back. Perfect for carrying children that grow tired from walking on hikes or other outings. The entire carrier can be machine washed when dirty.

Suitable for

Front carrying (Facing inward)	A baby who can sit up or a child weighing up to 13kg (around 6 to 24 months)
Back carrying	A baby who can sit up or a child weighing up to 15kg (around 6 to 36 months)

*The guideline above shows a child's general age, weight and growing stages. May not be suitable depending on the child.

■ Components

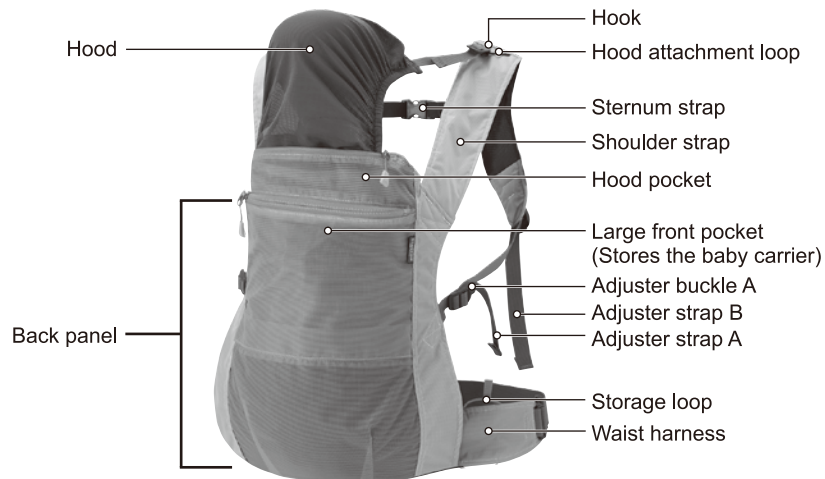

■ Safety Warnings! Please read carefully.

⚠ DANGER! Under certain conditions, use of this product can result in major injury or death.

FALL HAZARD!

- Be careful when carrying or lowering the child.
- Do NOT use this product while performing other activities or sports, such as cycling or skiing.
- Do NOT bend at the waist when using the carrier. Bend at the knees and carry the child to prevent falling accidents.
- Prior to use, make sure the product's straps and buckles are functioning properly. Do NOT unfasten the waist harness while using this product.
- Do NOT change child's position when using this product.

SUFFOCATION HAZARD!

- Do NOT adjust straps too tightly.
- When using this product, always make sure child's mouth and nose are unobstructed.

CARRYING AND LOWERING

- When using this product, gently carry and lower the child.
Carry and lower the child from a lower position. When back carrying, ask for help if necessary.
- Prior to use, make sure the product's straps and buckles are functioning properly. Stop using immediately if you notice any damage or irregularities. Make sure there is no loosening during use.
- When front carrying an inward-facing child, make sure that the child's head doesn't interfere with your vision or walking.

⚠ WARNING! Under certain conditions, use of this product can result in injury, death, or property damage.

- Do NOT modify or alter this product. Improper modifications and alterations can damage the product and impair functionality.
- Please follow recommended care and storage instructions. Improper care and storage can lead to a decrease in performance.
- Try to prevent swinging or shaking the carrier as much as possible when carrying your child.
- When using this product, make sure child's arms and legs are unobstructed.
- This product is for adults only. Do NOT allow a child to carry another child.

⚠ CAUTION! Under certain conditions, use of this product can result in injury or property damage.

- This carrier is meant for one child. Do NOT allow two children to ride in this carrier.
- Do NOT allow child's fingers to slip into buckle openings. Always fasten buckles when not in use.
- Prior to use, practice wearing the baby carrier and ask for help if necessary.
- Stop using product if the child shows signs of discomfort, or if the user feels sickness or pain.
- If direct skin contact causes redness or rashes, cover child's exposed skin with clothes or towels to prevent direct contact with product.
- Do NOT use immediately after a child has eaten. May apply pressure to the child's stomach and cause digestion problems.
- Do NOT use for more than 2 hours at a time and always monitor child's health and carry position.
- Do NOT use this product while cooking, doing housework or cycling.

Prior to use, inspect this product for: Stop using immediately if you notice any irregularities.

- Buckle, strap, and fabric damage.
- Properly functioning buckles and straps.
- Properly adjusted strap length.
- Properly adjusted waist harness.


Prior to use

- Prior to use, practice wearing the baby carrier without a child and understand how to adjust waist harness and shoulder straps.
- When back carrying a child, adjust length of the shoulder straps to be slightly longer than when front carrying.
- Wear the waist harness slightly higher when the back panel is longer than the child's height. Insert a towel or cushion underneath the child to adjust height.

Using the baby carrier


○ **Installing waist harness**

- ① Make sure the care label is facing the stomach.
- ② Wrap around the waist. See below to fasten buckles.

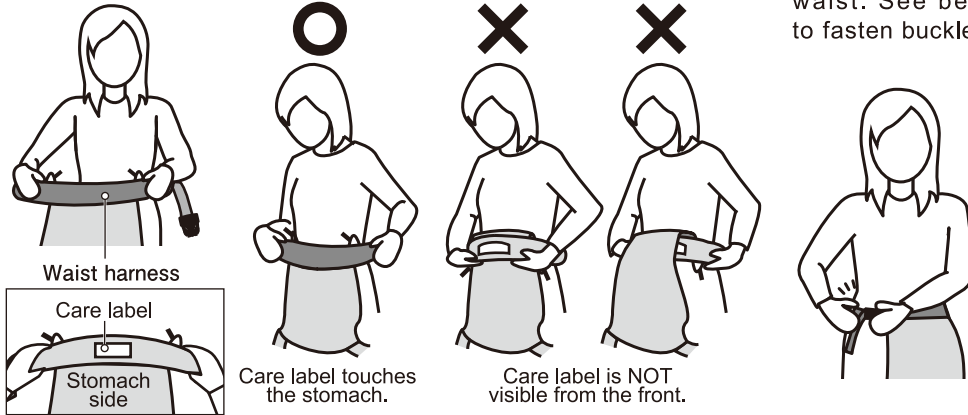

Fastening waist harness

CAUTION Excess outer strap may snag on objects, causing the user to fall and may result in injury. Keep excess strap within 10cm.

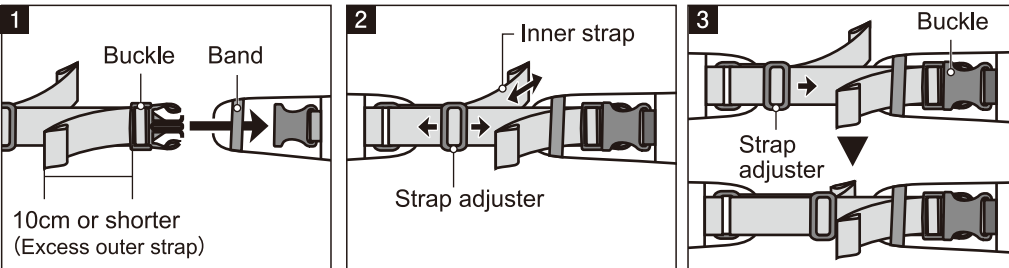

Adjust the outer strap to keep excess strap within 10cm, then slide buckle under the band and fasten.


*Make sure the buckle clicks securely into place when fastening.

Adjust the overall strap length to match the waist size by changing the position of the strap adjuster and the inner strap length.


Hold only the strap adjuster and move it toward the buckle to secure excess strap on the inner strap.

○ **Front carrying position (Facing inward)**

- ① Fasten the waist harness.
- ② Hold the child and spread their legs to the sides.
- ③ Hold the child with your right hand and shoulder the left shoulder strap.
- ④ Hold the child with your left hand over the baby carrier and shoulder the right shoulder strap.

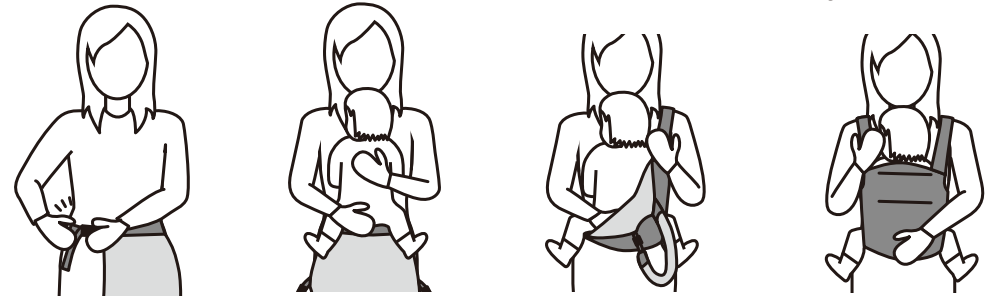

- ⑤ Fasten the sternum strap.
- ⑥ Adjust length of the sternum strap.
- ⑦ Make sure the child's arms are coming out from the baby carrier and adjust adjuster strap A.
- ⑧ Make sure the child is securely sitting in the center.

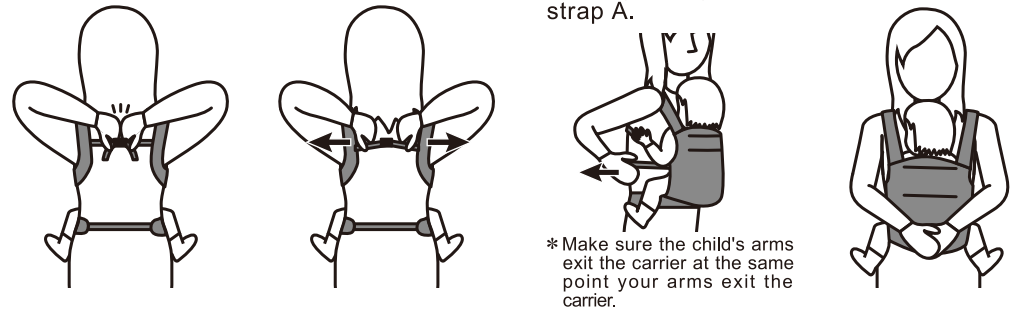

○ **Unfastening front carrying position (Facing inward)**

- ① Hold the child with your left hand and unfasten the sternum strap using your right hand.
- ② Remove both shoulder straps from the shoulders while holding the child.
- ③ Use both hands to lower the child and then unfasten the waist harness.



○ Back carrying position

1 Fasten the waist harness and move the baby carrier to the right side of the waist.





*3 Slightly loosen the waist harness to easily move the baby carrier to the back.

2 Hold the child with your right hand and place the baby carrier over the child using your left hand.

*Make sure the child doesn't fall.

3 Hold the child with your right hand over the baby carrier and gently turn the baby carrier to the back. Shoulder the left shoulder strap.

4 Hold the child with your right hand and hold the right side of the shoulder harness with your left hand. Shoulder the right shoulder strap.

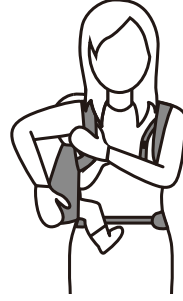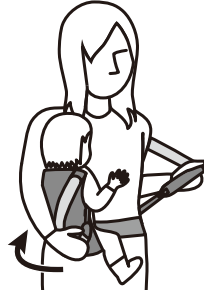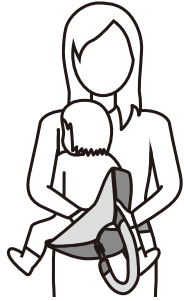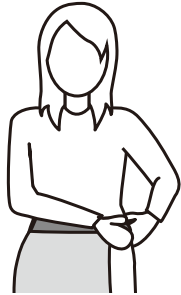


5 Hold the right side of the shoulder harness with your right hand and gently move the child to the back.

6 Fasten and adjust length of the sternum strap.

7 Make sure the child's arms are coming out from the baby carrier and adjust adjuster strap B.

8 Make sure the child is securely sitting in the center.

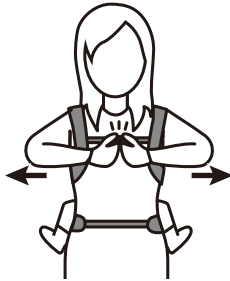

* Make sure the child's arms exit the carrier at the same point your arms exit the carrier.

○ Unfastening back carrying position

1 Loosen adjuster strap B and unfasten the sternum strap.

2 Move the baby carrier to the right side of the waist.



3 Hold the right shoulder strap with your left hand and remove your right arm from the shoulder strap.



5

4 Hold the child with your right hand over the baby carrier and remove your left arm from the left shoulder strap.

5 Use both hands to lower the child and then unfasten the waist harness.

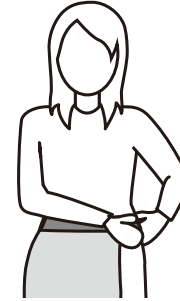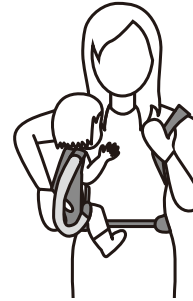


○ Using the hood

1 Pull the hood out from its pocket.

2 Cover the child's head with the hood.

3 Attach the hood's hook to the attachment loop and adjust its length.

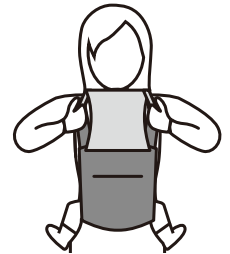


○ Storing while wearing

When not carrying a child, this product can be wrapped up and carried around the waist.

1 Fold the shoulder harness inward towards you.

2 Roll up twice from the top towards the waist harness strap as shown in the figure.

3 Pass adjuster buckle A through the storage loop from the bottom. Hook the storage loop onto the backside of adjuster buckle A to secure.

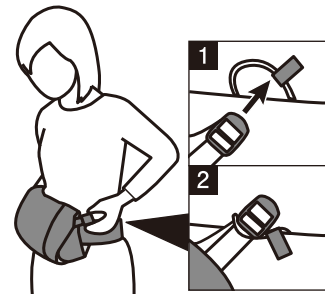

6

- Large front pocket**
- Holds an ice pack or hand warmer.
- Pack the carrier into the large front pocket to carry compactly.

■ **Care** **Improper care and storage can shorten the lifespan of this product. Follow the recommendations below to extend the lifespan of your product.**

- Use a washing net when washing.
- Do NOT dry clean. May cause damage.
- Depending on detergent, fabric whitening agent may cause product color change.
- If zipper movement becomes stiff, use the Smooth Slider (sold separately) or candle wax to restore functionality.

■ **Storage**

- To prevent deformation and damage, do NOT store near heat sources.
- Store in a well-ventilated, cool, dry place. Keep out of direct sunlight and ultraviolet light.
- Do NOT store together with gasoline or paint thinner.

■ **Disposal**

- Please follow local regulations regarding waste disposal.

■ **Warranty**

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at Montbell's discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

■ **Accessories (Sold separately)**

The following accessories are available for use with this product.

- **Pocketable Baby Carrier Rain Cover**
Provides rain protection. Also compatible with a stroller.
- **Pocketable Baby Carrier Warmer**
Provides warmth and is easy to maintain. Also compatible with a stroller.

MEMO

■ **Specifications**

Style# : 1133382 Name : Pocketable Baby Carrier Waist : (One size fits most) 59 ~ 107cm
Material : (Face fabric) nylon (Inner fabric) polyester

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

mont-bell Co.,Ltd.
2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN
<https://www.montbell.com/>