

# mont·bell

## 取扱説明書

# フレックスウォーターパック ドリンクチューブ

## Flex Water Pack Drink Tube

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます)は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。なお、ご不明な点等ございましたら、販売店もしくは(株)モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。


**注意** 人が傷害を負ったり物的損害の発生が想定される内容です。

- 本製品は、フレックスウォーターパック専用です。他の容器で使用しないでください。
- 火のそばに置かないでください。
- 初めてご使用になる前に、食器用洗剤を含ませた柔らかいスポンジなどでよく洗浄してください。
- 金属製たわしや、磨き粉などは使用しないでください。
- ご使用後はよく洗ってから、乾いた布などで水気を十分拭き取り、乾かしてから保管してください。
- 普段のお手入れは、柔らかいスポンジに食器用洗剤をつけ、よく洗ってください。
- 電子レンジ・食器洗浄機・食器乾燥機は使用しないでください。熱により変形し、飲み物が漏れる恐れがあります。
- 本製品の煮沸はしないでください。破損する恐れがあります。
- 改造・修理は絶対にしないでください。故障・事故の恐れがあります。
- お子さまが小さいパーツを誤飲しないように注意してください。
- 本製品を取り付けたフレックスウォーターパックをバックパックに収納する際は上下の向きを逆さ(キャップを下側)にしないでください。キャップの周辺に負荷がかかることで、破損したり飲み物が漏れる恐れがあります。

## ■ 使用方法

- ①お持ちのフレックスウォーターパックの容量を確認してください。
- ②1.0Lのフレックスウォーターパックに装着する場合、ストローをハサミ等でカットして長さを調節します。

フレックスウォーターパック 1.0L	ストロー長/: 28cm
フレックスウォーターパック 1.5L フレックスウォーターパック 2.0L	ストローはカットせずそのままご使用いただけます。

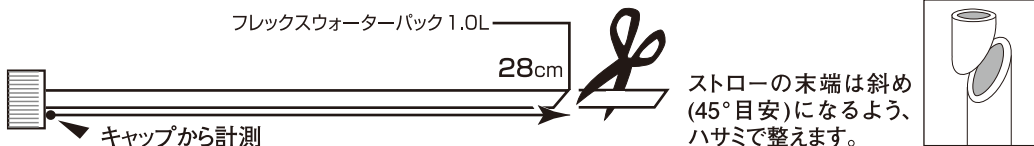

## ■ 仕様

品番：1124819 品名：フレックスウォーターパック ドリンクチューブ  
素材：(チューブ)熱可塑性エラストマー、ポリプロピレン (飲み口)シリコンゴム、ポリエチレン、  
ポリアセタール、ポリプロピレン (ストロー)シリコンゴム (キャップ)ポリエチレン、ポリプロピレン  
耐熱温度：70℃ ~ -20℃

## ■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

# mont-bell

## User's Manual

# Flex Water Pack Drink Tube

## Flex Water Pack Drink Tube

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product. If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.




**CAUTION!** Under certain conditions, use of this product can result in injury or property damage.

- This product is specially designed for Montbell's Flex Water Pack. Do NOT use this product for any other container.
- Keep away from fire.
- Before using for the first time, wash the product with a soft sponge and soap.
- Do NOT use metal scrubbers or metal polish.
- After use, wash, wipe off excess water with a towel and dry thoroughly before storing.
- After using, always wash the product with a soft sponge and soap.
- This product is NOT microwave, dishwasher or dish dryer safe. High temperatures can cause deformation, which can possibly lead to leaks.
- Do NOT boil. Boiling may damage the product.
- Do NOT modify or alter this product. Improper modifications and alterations can damage the product and impair functionality.
- Choking hazard. Keep small parts away from children.
- When using this product with a backpack, keep its cap pointed up. If the Flex Water Pack is placed with the cap facing down, it is possible to stress and damage the cap causing leaks inside your backpack.


## Directions

- ① Check your Flex Water Pack size and its optimal straw length.
- ② To use with the Flex Water Packs 1.0L, cut the straw into the required length.

Flex Water Packs 1.0L	Straw length: 28cm
Flex Water Packs 1.5L Flex Water Packs 2.0L	No need to cut the straw.

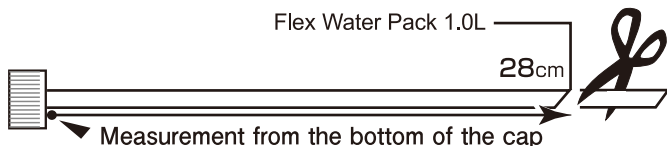

Cut the end of straw diagonally (about 45 degrees).

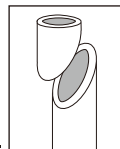

## Specifications

Style # : 1124819

Name : Flex Water Pack Drink Tube

Material : (Tube) Thermoplastic elastomer, polypropylene ; (Drinking Valve) silicone rubber, polyethylene, polyacetal, polypropylene ; (Straw) silicone rubber ; (Cap) polyethylene, polypropylene

Heat / Cold resistance : 70°C ~ -20°C

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

mont-bell Co.,Ltd.

2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN

<https://www.montbell.com/>

44-3973-2209