

mont·bell

取扱説明書(各モデル共通)

アルパインポール用 ストッパー(交換用)

Stopper for Alpine Pole

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます)は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。

なお、ご不明な点等ございましたら、販売店もしくは(株)モンベルカスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

■ 特長


本製品はモンベル製のツイストロック・システムを搭載した、アルパインポールシリーズ専用の交換用ストッパーです。

※2021年までのモデルには対応しません。

対応ポールの詳細はモンベルのWEBサイトをご覧ください。

※他社製品には使用できません。

■ 各部の名称

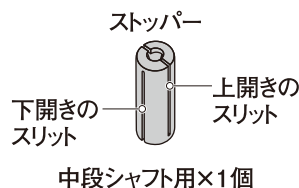

■ 安全上の注意

必ずお読みください

注意 人が傷害を負ったり物的損害の発生が想定される内容です。


- ストッパー部に潤滑油等を使用しないでください。確実な固定が得られず、転倒などの原因となり危険です。
- 本製品はお子さまの手の届かないところに保管してください。
- 本製品をお子さまが誤って飲み込まないように注意してください。

■ 交換方法


※ストッパーを交換する際は、ポール本体の取扱説明書を併せてご覧ください。また、ポールを組み立てた状態から始めてください。

ストッパーが磨滅したり、汚れたりすることでポールに十分な固定力が無くなった際に交換してください。

- 1 中段シャフトを矢印の方向に回して固定を緩め、上段シャフトから中段シャフトを引き出します。
- 2 中段シャフトから古いストッパーを取り外します。

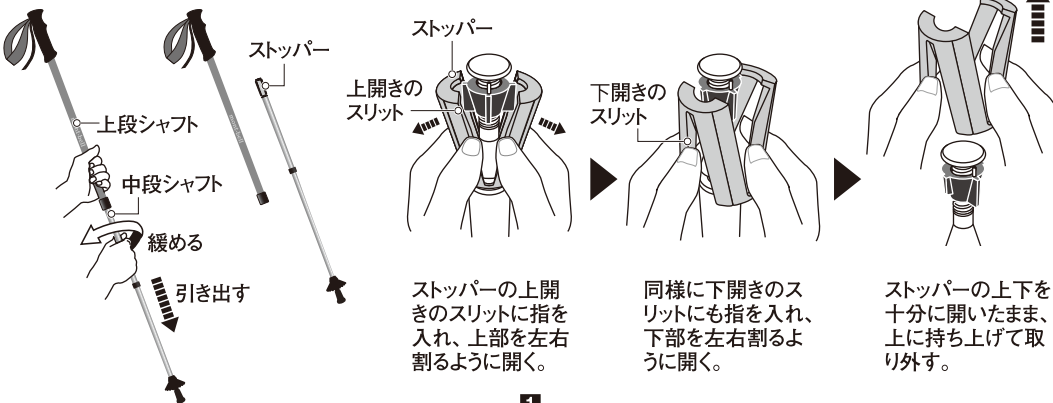


- 3 新しいストッパーを2の逆の手順で中段シャフトに取り付けます。

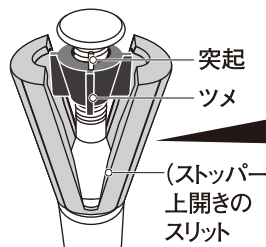


黒い部品の4か所のツメのうち、1か所に突起があります。突起とストッパーの上開きのスリットの位置を合わせてください。


※位置が合わないとストッパーが正しく機能しません。

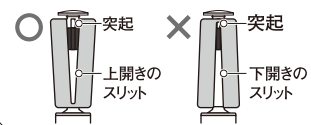


- 4 ストッパーの4か所のスリットに黒いパーツのツメが図のようにぴったりはまっていることを確認してください。はまっていない場合は、ストッパーを指ではさみ、中心へ向かって押します。

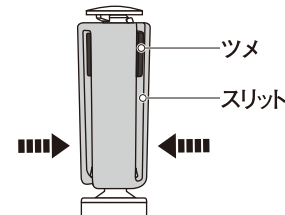

- 5 中段シャフトを上段シャフトに差し込み、中段シャフトを矢印の方向に回して固定します。

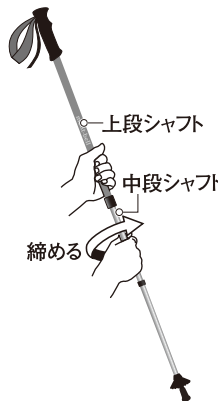

- 6 ポールに体重をかけ、確実に固定できる状態に改善されているか確認してください。

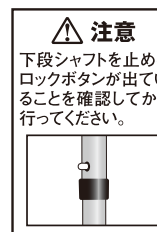

交換しても改善が見られずシャフトが固定できない場合は、シャフト内部が汚れている等、他の原因が考えられます。下記弊社カスタマー・サービスまでお問い合わせください。

■ 保管方法

- 直射日光の当たらない風通しの良い場所で保管してください。
- 火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。

■ 廃棄方法

- 廃棄方法は住まいの自治体の収集方法に従ってください。

■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■ 仕様・サイズ

品番：1124923

品名：アルパインポール用ストッパー(交換用)

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

mont-bell

User's Manual

Stopper for Alpine Pole

Stopper for Alpine Pole

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Features


Replacement stopper for the twist locking Alpine series of trekking poles.

*Not compatible with models made in or before 2021.

Please see website for compatibility details.

*Only compatible with Montbell trekking poles.

Components

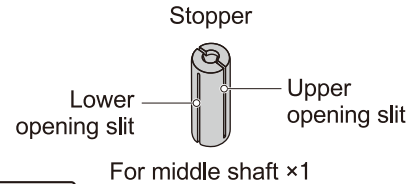

Safety Warnings! Please read carefully.

CAUTION! Under certain conditions, use of this product can result in injury or property damage.


- Do NOT apply lubricants to the stoppers. Lubrication prevents the pole from locking properly. If the shaft is not properly locked, the shaft can come apart or slide closed during use and result in a falling accident.
- Store out of the reach of children.
- Stoppers are a choking hazard for small children.

Directions


※ Please also refer to the user's manual included with your trekking pole.

Replace the stopper when it no longer locks the pole securely due to dirt or wear and tear.

- 1 Turn the middle shaft in the direction of the arrow to loosen, then remove it from the upper shaft.
- 2 Remove the old stopper from the middle shaft.

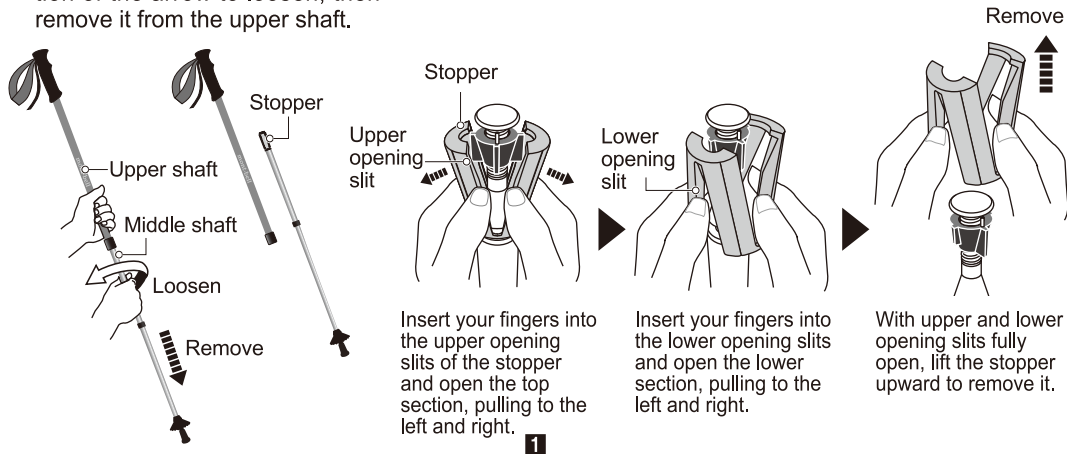


- 3 To replace the stopper on the middle shaft, follow the reverse procedure in 2.

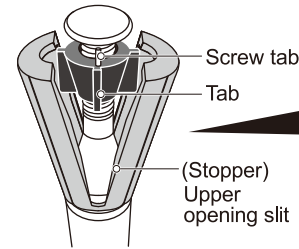


Find the screw tab which is aligned with one of the four tabs. Adjust the screw tab to the upper opening slit.


※ The stopper will not function properly if the screw tab isn't aligned correctly.




- 4 Make sure that the four tabs on the black piece of the trekking pole are well placed in between the four slits of the stopper as shown in the illustration below. For adjustments, pinch the stopper towards the center.

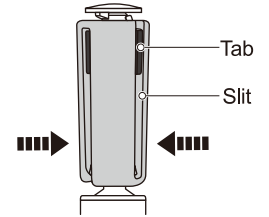

- 5 Insert the middle shaft into the upper shaft, then turn the middle shaft in the direction of the arrow to secure it.

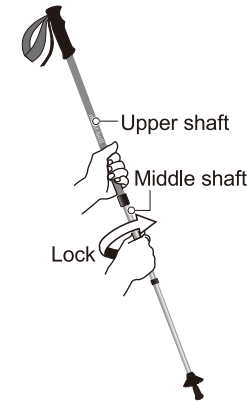

- 6 Place your weight on the pole to see that the stoppers are performing as intended and have securely locked the shafts in place.

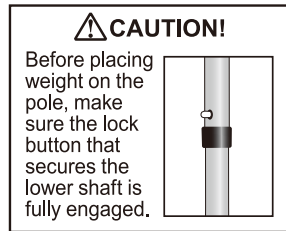

If the pole still isn't locking securely after replacing the stopper, there may be another cause such as dirt or debris inside the pole. Please contact Montbell Customer Service.

Storage

- For long-term storage, store in a well-ventilated, cool, dry place away from direct sunlight.
- To prevent deformation and damage, do NOT store near heat sources.

Disposal

- Please follow local regulations regarding waste disposal.

Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at Montbell's discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Specifications

Style#: 1124923

Name: Stopper for Alpine Pole

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

mont-bell Co.,Ltd.

2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN

<https://www.montbell.com/>