mont·bell

取扱説明書（各モデル共通）

アルパイン フォールディングポール

Alpine Folding Pole

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書（以下「本説明書」といいます）は本製品の正しい取扱方法を説明しています。ご使用の前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。
なお、ご不明な点等ございましたら、販売店もしくは（株）モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

■ 特長

剛性と軽量コンパクト性を両立した折り畳み式ポールです。サイズの調節が行えるテレスコピック・システムを備え、推進力やバランス感覚をサポートします。

■ 各部の名称

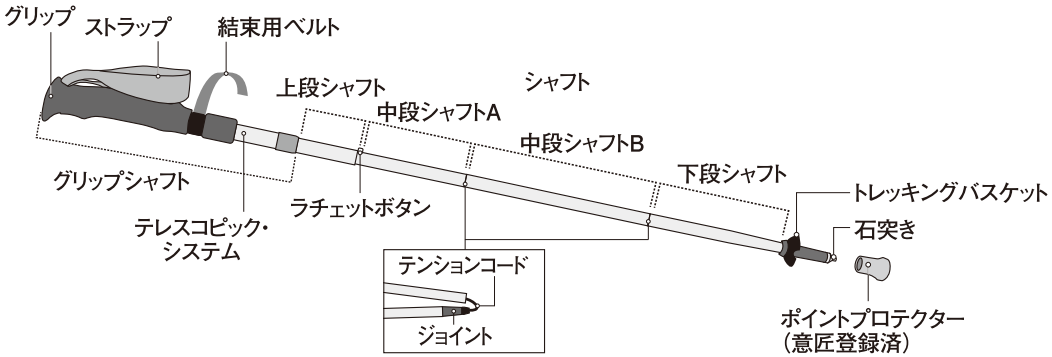

■ 安全上の注意 必ずお読みください

⚠ 警告 場合により人が死亡または重傷を負う可能性が想定される内容です。
軽傷または物的損害が発生する頻度が高いことが想定される内容です。

○本製品は登山用です。これ以外の目的では使用しないでください。
○本製品は登山用ピッケルではありません。グリセードやクライミングの支点には絶対に使用しないでください。また、両端を強い力で引くとグリップやシャフトが抜けてしまう可能性があります。人や荷物の引き上げには使用しないでください。
○岩場など手を使って確保が必要な場所では、バックパックに収納するなどして使用しないでください。
○ご使用時にシャフトの固定が不十分だと転倒などの原因となり危険です。ご使用前に必ず固定状態を確認してください。行動中も緩みがないかを確認してください。
○本製品の改造や分解などは絶対にしないでください。性能が損なわれ、充分に保護能力が発揮できない恐れがあります。
○使用前は毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合は直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。
○正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発揮できない恐れがあります。

⚠ 注意 人が傷害を負ったり物的損害の発生が想定される内容です。

○使用中は振り回さないでください。周囲の人や物に危害を加える恐れがあります。
○“STOP” 表示を超えて使用しないでください。使用中に破損する恐れがあります。
○シャフト及びストッパー部には潤滑油等を使用しないでください。確実な固定が得られず、転倒などの原因となり危険です。
○横からの強い荷重をかけないでください。構造上、横方向からの荷重には縦方向ほどの強度はありません。
○使用しないときは、石突きに必ず付属のポイントプロテクターを装着してください。
○収納時はシャフトが脱落することがありますのでザックや収納ケース等に収納してください。
○ポールに全体重をかけることはお避けください。ケガやポールが破損する恐れがあります。
○お子さまや、ご年配の方がご使用になる際は、周囲の人がシャフトが固定されていることを確認してください。
○落雷の恐れがあるときは使用しないでください。
○先端のポイントプロテクターは消耗品です。すり減った場合は速やかに専用のポイントプロテクターに交換してください。
○高温になる場所に放置しないでください。グリップが変形したり、やけどをする恐れがあります。
○極度の低温下ではシャフトが凍ったり、各部の機能が低下することがあります。
○グリップは素材の特性上、保水して凍ったり、雪が付着することがあります。凍る可能性のある状況での使用はお避けください。

■ 使用前の点検

使用にあたっては、毎回必ず次のことを確かめてください。

□ひびや変形が見られないか　□シャフトのロックは確実にできるか

□テンションコードに緩みがないか

■ 使用方法

コースや地形に応じてポールの長さ、ストラップの長さを適切に調節してください。

○ トレッキングバスケットの着脱方法

■取り付け方
バスケットを時計回りに回しながら、空回りするまで差し込みます。

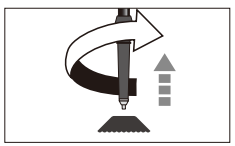

■取り外し方
バスケットを下方向に引きながら反時計回りに回し、引き抜きます。

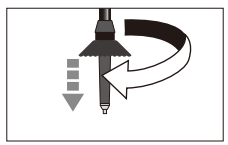

○ ポイントプロテクターの着脱方法

■取り付け方
カチッと音がするまで、ポールの石突きにしっかり差し込んでください。奥まで入れないと脱落する恐れがあります。

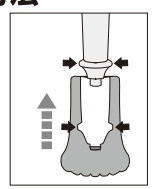

プロテクターの重要性
植生に影響を与える可能性のある登山道や木道では必ずポイントプロテクターを装着してください。トレッキングポールの石突きが植生にダメージを与える恐れがあります。

○ 長さの調節の目安

（使用する長さに応じて調節してください。）

ポールと腕の角度が、約90度になるように調節してください。

体の前に楽に突けるように短めに調節してください。

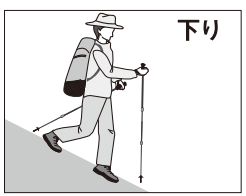

体に負担をかけない直立姿勢を維持するため、長めに調節します。

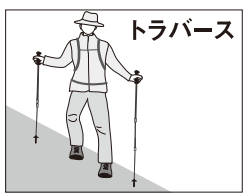

山側を短めに、谷側を長めに調節してください。

○ 長さの調節方法

❶結束用ベルトを外します。ベルトが垂れないように、グリップへ巻き付けて固定します。

❷グリップと中段シャフトAを持ち、ラチェットボタンがラチェット穴から出るまで図のように中段シャフトAをグリップシャフトから引き出します。その際は、各ジョイントをシャフトに確実に接続してください。

※ラチェットボタンがラチェット穴から確実に出ていることを確認してください。

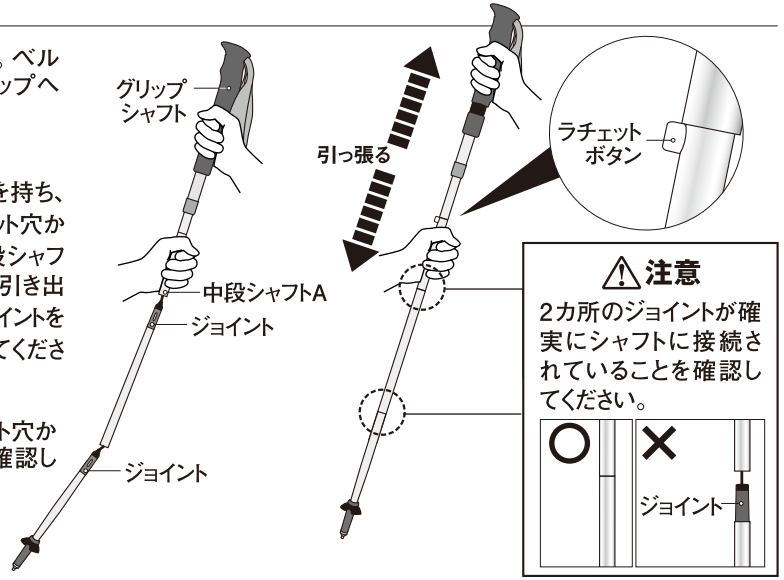

⚠注意

2カ所のジョイントが確実にシャフトに接続されていることを確認してください。

❸グリップを握り、上段シャフトを時計回りに回して緩め、伸ばします。
※緩め続けながら上段シャフトを伸ばすと、上段シャフトがグリップシャフトから抜けてしまうことがあります。その際はグリップシャフトに上段シャフト差し込み、反時計回りに回して固定してください。

❹グリップを握り、上段シャフトを使用する長さの目盛の位置まで伸ばし、反時計回りに回して固定します。

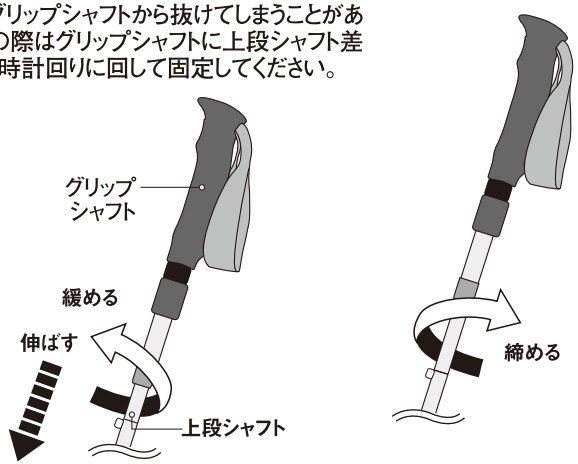

⚠注意

ポールの調節幅は“STOP”表示が隠れる位置で調節してください。表示以上に伸ばして使用するとストッパー部に過度の負荷がかかり、破損の原因となります。

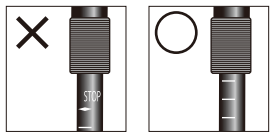

○ 収納方法

❶上段シャフトを時計回りに回して緩め、グリップシャフト内に収納し、反時計回りに回して固定します。

❷ラチェットボタンを指で押し込み、中段シャフトAを上段シャフトへ収納します。

❸中段シャフトB、下段シャフトとジョイントの接続を外し、折りたたんで結束用ベルトで固定します。

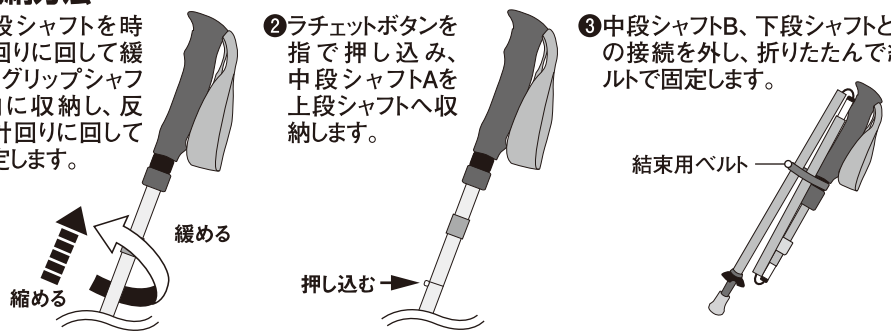

■ グリップの握り方とストラップの調節方法

○ グリップの握り方

❶下方向からストラップに手を通します。

❷ストラップとグリップを図のように握ります。

○ ストラップの調節方法

短くする時
テープを引くことで短くなります。

長くする時
バックルを起こすとストラップが開放され、長さの調節ができます。

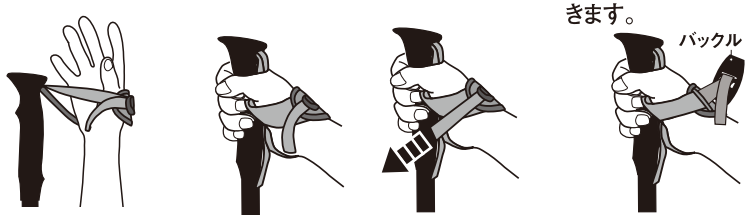

ストラップの向きの調節
出荷時には全て右手用に設定されています。

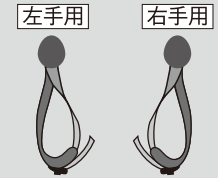

左手で使用するときにはバックルからストラップを外し、逆向きに一回ねじることで、使用しやすくなります。

■ お手入れ方法

間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。
使用後や保管時は以下の点を参考にしてください。

○ストラップが汚れた際は、中性洗剤で洗ってください。洗浄後は十分にすすぎ、完全に乾燥させてください。

○ご使用後は図のように上段シャフトを外して汚れをよく落とし、完全に乾燥させて保管してください。

○シャフトおよびストッパー部に潤滑油を使用しないでください。

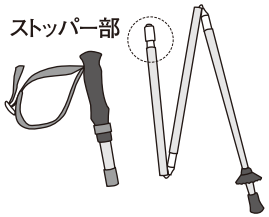

■ 保管方法

○ご使用後はシャフトを上記のお手入れ方法の図のように出して保管してください。ロック（ラチェットボタンがラチェット穴から出た状態）を解除せずに保管するとテンションコードを伸ばしてしまう恐れがあります。

○本製品を長期間使用せずに保管する場合は、直射日光の当たらない風通しの良い場所に保管してください。

○火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。

■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

○本製品の誤った使用方法によるもの　○間違ったお手入れ、保管方法、経年変化による素材劣化
○乱暴な取り扱いによるもの　○その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■ オプション（別売） 本製品は下記の別売のオプションを利用することができます。

● **トレッキングバスケット**
交換用のバスケットです。

● **ポイントプロテクター**
交換用のキャップです。

● **ポイントプロテクター ウォーキング**
推進力を高める形状をしたラバー製キャップです。

● **スノーバスケット**
積雪期の歩行に適した交換用バスケットです。

● **アルパインフォールディングポール用 ストッパー（交換用）**
シャフトの固定力が無くなった際に交換するパーツです。

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

株式会社モンベル　本　社　〒550-0013 大阪市西区新町2-2-2　Tel. 06-6531-3544　フリーコール：0088-22-0031
商品についてのお問い合わせはカスタマー・サービスまで　モンベルホームページ　http://www.montbell.jp

44-2215-1703

mont·bell

User's Manual

Alpine Folding Pole

Alpine Folding Pole

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

■ Description

This folding pole offers a great balance of strength and a compact, lightweight profile. Great for supporting your balance and momentum while trekking, these poles also utilize a telescopic system for adjusting length.

■ Parts

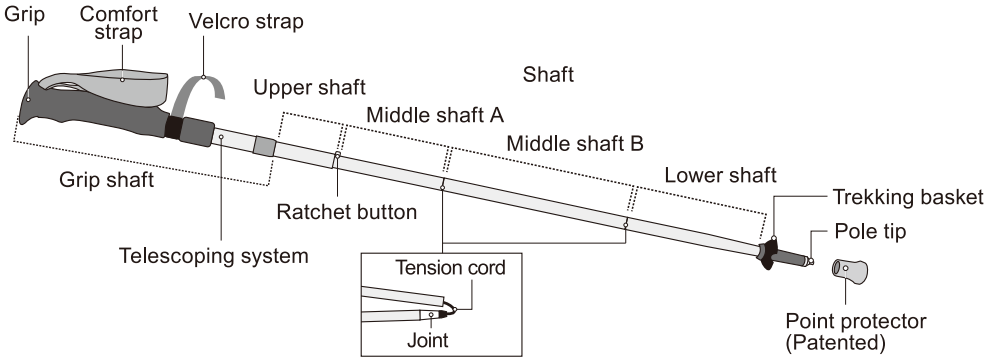

■ Safety Warnings! Please read carefully.

⚠ WARNINGS! Under certain conditions, use of this product can result in injury, death, or property damage.

- ◯For hiking and trekking use only.
- ◯Do NOT use as an alpine axe, for glissading or as an anchor for climbing. Do NOT pull strongly on both ends of the pole as the shaft or grip can come apart. Do NOT use the pole for pulling up people or luggage.
- ◯If the shaft is not properly secured, the shaft can come apart or slide closed during use and result in a falling accident. Prior to use, check to see if the shafts are properly locked in place and periodically check for loosening.
- ◯In rocky terrain where climbing is necessary, store poles in your backpack or its stuff sack to free up your hands.
- ◯Do NOT modify or alter this product. Improper modifications and alterations can damage the product and impair function.
- ◯Please follow recommended care and storage instructions. Improper care and storage can lead to decrease in performance.
- ◯Prior to use, check the product's condition and stop using immediately if you notice any damage or irregularities.

⚠ CAUTION! Under certain conditions, use of this product can result in injury or property damage.

- ◯Do NOT swing or wave poles around to prevent injury and property damage.
- ◯Do NOT extend pole shafts further than "STOP" marking. This may damage the stopper during use.
- ◯Do NOT apply lubricants to the shaft. If the shaft is not properly locked, the shaft can come apart or slide closed during use and result in a falling accident.
- ◯Do NOT apply a strong horizontal force to the pole. Poles are not designed to support lateral forces.
- ◯Attach point protector when pole is not in use.
- ◯When not in use, store trekking pole inside a stuff sack or backpack. Loose shafts can become dislodged and fall off.
- ◯During use, periodically check shaft for loosening.
- ◯Never place your full weight onto this pole.
- ◯If someone in your party cannot verify if the shaft is stable, such as a child, have someone in the group help verify the pole is safe to use.
- ◯Do NOT use if there is a chance of lightning.
- ◯Prior to, during and after use, check the pole' s condition for damage and irregularities.
- ◯Replace the point protector if it shows signs of heavy wear.
- ◯Exposure to heat can cause the grip to deform and metal to become burning hot.
- ◯Exposure to freezing cold temperatures can freeze the shaft and impair performance.
- ◯During cold weather, snow can stick to the grip, absorbing moisture and freeze. Not recommended for use in cold weather.

■ Prior to use, inspect this product for:

□Cracks, damage or other irregularities.
□Shafts are locked and secure. □Tension cord is stretched.

■ Directions

*Adjust pole length and strap length based on trail conditions and terrain for improved comfort while trekking.

◯ Trekking basket

■Attachment

Screw on the trekking basket turning clockwise until it spins in place.

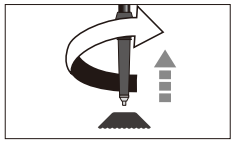

■Removal

While applying downward pressure, turn the trekking basket counterclockwise.

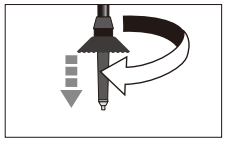

◯ Point protector

■Attachment

Twist the guard onto the pole's tip until it clicks into place and makes a clicking noise. If not properly attached, point protector can become dislodged and fall off.

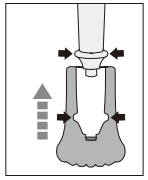

Protector Importance

Protect your pole tips with this protective rubber cover when they are not in use and when on the trail. Guards not only extend the life of your pole tips, but reduce damage to vegetation and impact on trails.

◯ Optimal Pole Length

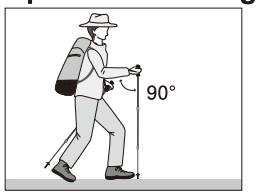

Level Terrain
Choose a length so the angle between your arm and the trekking pole is 90 degrees.

Ascending
Shorten the pole to make it easier to place the pole in front of you.

Descending
Lengthen the pole to make it easier to place the pole in front of you.

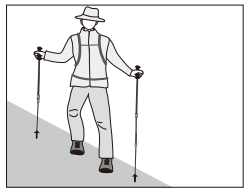

Traverse
Hold the side closest to the mountain at a lower position and the side closest to the valley at a higher position.

○ Adjusting Pole Length

❶Unwind the Velcro strap to free the pole sections. Then rewind the Velcro strap around the grip shaft.

❷Hold the grip shaft and the upper shaft, and extend until the ratchet button locks in place. Check each joint and make sure that each shaft is properly connected.

*Make sure the ratchet button is fully extended and locked in place.

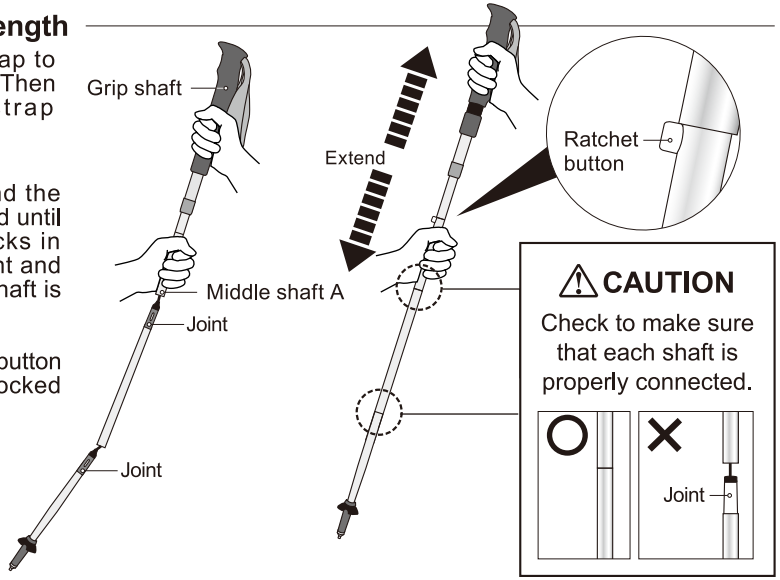

⚠CAUTION

Check to make sure that each shaft is properly connected.

❸Hold the grip shaft and turn the upper shaft clockwise to loosen and adjust the length of the upper shaft.

*If too loose, the upper shaft can separate from the grip shaft. When this happens, put the grip shaft back onto the upper shaft and turn counterclockwise to lock in place.

❹Adjust the length of the grip shaft using the scale on the upper shaft as a reference and turn counterclockwise to lock in place.

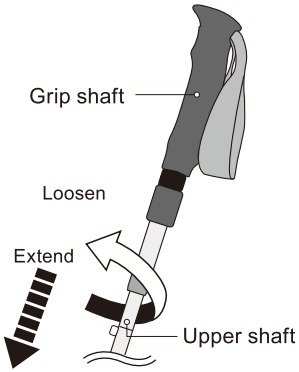

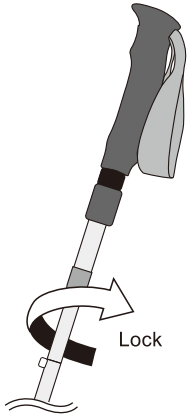

⚠CAUTION

Do NOT extend the grip shaft above the "STOP" marking. Extending the shaft above this marking can place too much force on and damage the inner stopper.

○ Storing

❶Loosen and slide close the upper shaft. Turn counterclockwise to lock in place.

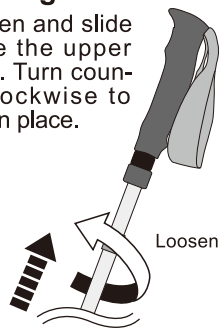

❷Push the ratchet button down and push middle shaft A into the upper shaft.

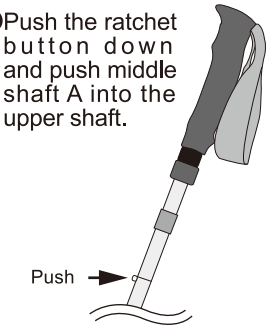

❸Disconnect middle shaft B and the lower shaft, fold pole up, and secure with the Velcro strap.

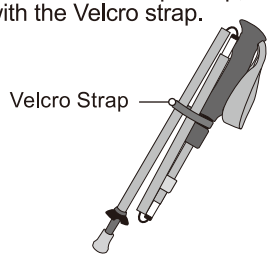

■ Holding the Grip and Adjusting Strap Length

○ Holding the Grip

❶Put your hand through the bottom of the strap.

❷Hold the strap and the grip (see Fig. below).

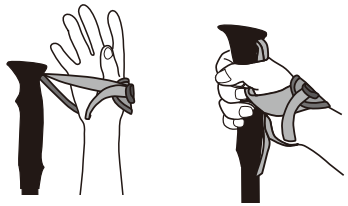

○ Adjusting Strap Length

To shorten
Pull strap.

To lengthen
Lift the buckle to release the strap and adjust accordingly.

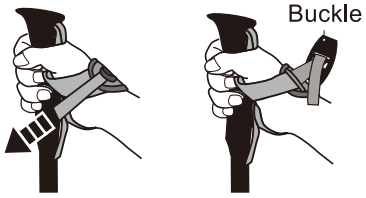

Adjusting Strap Position

Pole straps by default are set for the right hand.

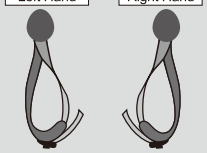

To change the strap for the left hand, remove the strap from the buckle, twist the strap 360 degrees in the opposite direction and loop back through the buckle.

■ Care

○If necessary, wash the strap with a mild soap. After washing, rinse thoroughly and allow to air dry completely.

○After use, remove the grip shaft, wipe of any dirt or residue, fold up loosely, and allow to dry completely (as shown to the right).

○Do not apply lubricants to the shafts or stopper.

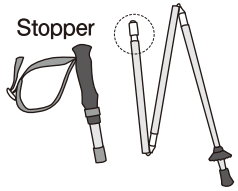

■ Storage

○After use, fold up loosely for storage (as shown above). If stored with the ratchet button locked, the tension will cause the tension cord to stretch.

○Store in a well ventilated, cool, dry place. Keep out of direct sunlight and ultraviolet light.

○Do NOT store in a car or places subject to temperature extremes.

■ Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at our discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

■ Accessories (Sold separately)

The following accessories are available for use with this product.

- **Trekking Basket**
  Replacement basket.
- **Point Protector**
  Replacement protector.
- **Point Protector Walking**
  Guard with excellent gripping abilities.
- **Snow Basket**
  Basket for trekking in snow.
- **Pole Clip**
  Stores up to two I Grip Series poles.
- **Alpine Grip Case S**
  Stores one pole.
- **Alpine Grip Case W**
  Stores two poles.
- **Stoppers for Alpine Pole & T Grip**
  Internal parts for when shafts no longer lock in place.

All product specifications and design are subject to change without prior notice.
Actual product specifications may vary.

mont-bell Co.,Ltd.
2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN
www.montbell.com

44-2215-1703