

mont·bell

取扱説明書

トレッキングパック シリーズ

Trekking Pack Series

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書（以下「本説明書」といいます）は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。

なお、ご不明な点等ございましたら、販売店もしくは（株）モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

■ 特長

軽量でシンプルな構造ながらも、必要な機能を備えた大型バックパックです。2、3泊程度のテント泊に適した60L(女性用は50L)と長期縦走にも対応する80Lと100L(女性用は70L)をラインアップしています。

■ 各部の名称

*写真は60Lです。

隠しポケット(トップリッド底部)

ピッケルやポールなどを
固定できる
フック付きコード

サイドリリース
バックル付き
コンプレッションベルト


ヒップスタビライザー

調節式
ショルダー
ハーネス

ショルダー
ストラップ

ヒップベルト

ショルダー
スタビライザー
パックカバー用ホック

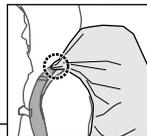

チェストサポート

ポールループ



パックカバー収納ポケット

■ 安全上の注意

必ずお読みください



警告

場合により人が死亡または重傷を負う可能性が想定される内容です。
軽傷または物的損害が発生する頻度が高いことが想定される内容です。

- 本製品の改造や分解などは絶対にしないでください。性能が損なわれ、十分に能力が発揮できない恐れがあります。
- 正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発揮できない恐れがあります。

注意 人が傷害を負ったり物的損害の発生が想定される内容です。

○使用前は毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合は直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。


■ **使用前の点検** 使用にあたっては、毎回必ず次のことを確かめてください。
異常が見られた場合は使用しないでください。

□ 本体に破れがないか □ バックルなどに破損がないか


■ 使用方法

○トレールウォーターパック(別売)取り付け方法

トレールウォーターパックは荷物を降ろさずに行動しながら水分補給ができる、チューブで給水するソフトタイプのボトルです。装着の際はトレールウォーターパック付属の取扱説明書も併せてご覧ください。

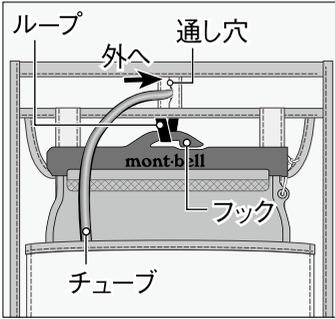


トレールウォーターパックのスライドパーツのフックを荷室内上部の図のループに掛けて装着し、図の通し穴からバックパックの外にチューブを出します。

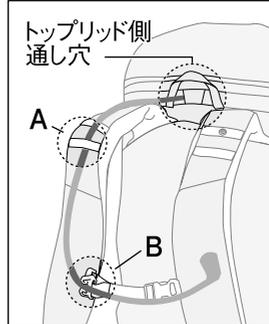

トプリッド側の通し穴からチューブを外に出し、ショルダーハーネスのループ(A)に通し、飲み口の位置を調節します。チェストサポートに付いている固定用クリップ(B)も併用します。


○フィッティングの手順

背面長の調節

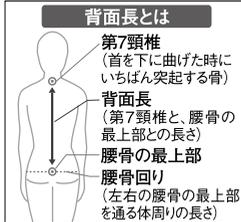


①左図を元にご自身の背面長を計ります。本製品のショルダーハーネスは下記の背面長に対応します。

[Women's]
・S: ~51cm ・S: ~46cm
・M: 51~55cm ・M: 46~50cm
・L: 55cm~ ・L: 50cm~

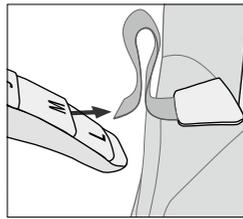

②左記の背面長に適合するショルダーハーネス位置を確認します。必要に応じてショルダーハーネス付け根のラダーバックルを緩め、ショルダーハーネスを外します。

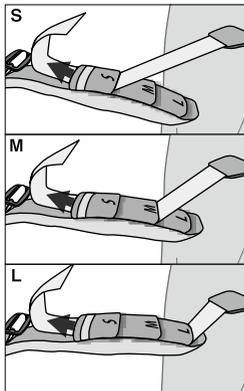

③ご自身のサイズに適合するショルダーハーネスのポケットに本体側のテープを左図のように通します。




④テープは根元のプレートまでしっかり差込み、ラダーバックルに通します。

! 使用中の緩みやズレを防止するため、余ったテープは右図のように折り返して再びバックルに通しておきます。浮きや余裕がないようにテープはしっかり引き切ってください。

背負い方

バックがジャストフィットしている状態とは、バックパネルとショルダーハーネスが体に隙間無く接している状態のことをいいます。ご使用にあたっては、ご自身の体格に合わせて、適切なフィッティングを行ってください。

本製品の各バックルに通したテープをあらかじめ適度に緩めておきます。また、実際の使用状態での正しいポジションを得るために、まず 10kg 程度の荷物をバックに入れます。

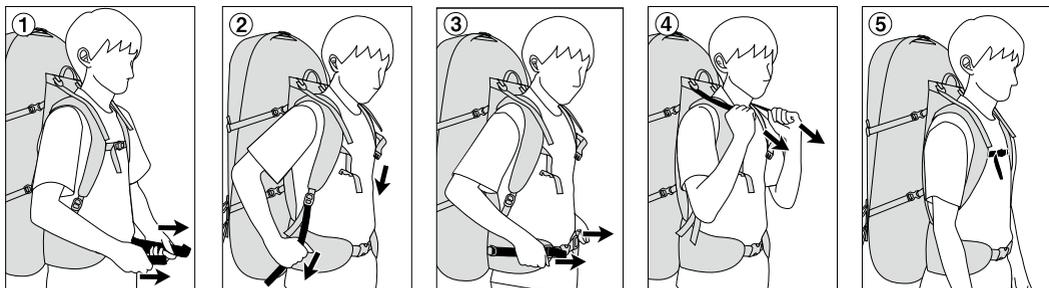

① バックを背負い、腹部を圧迫しないように腰骨部分でヒップベルトを締める。

② ショルダーハーネスが体にフィットするようにショルダーストラップを引く。

③ ヒップスタビライザーを引いて底部の左右の揺れを防ぐ。

④ ショルダースタビライザーを引き、上部の重心を体に引き寄せ安定させる。

⑤ ショルダーハーネスを安定させるためにチェストサポートを留める。

以上で、本製品の基本的なフィッティングは完了です。ただし、各テープ類の長さは身に着ける服によっても変わりますので、その都度の微調節が必要です。苦しくない範囲でしっかり締めてください。

※本製品に内蔵されているフレームは、あらかじめ体の背面のカーブに合わせて曲げています。弾性が強く使用者の体の背面カーブに形状が追従するので、力を加えフレームを曲げて調節する必要はありません。

お手入れ方法

間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。使用後や保管時は以下の点を参考にしてください。

- 水で汚れを洗い流す場合、フレームを抜いてください。
- 背面の汗による汚れや泥の汚れを水で軽く洗い流した後に中性洗剤を含ませたスポンジでブラッシングをし、洗剤を洗い流してから陰干してください。
- ドライクリーニングや洗濯機による洗濯はしないでください。生地を傷める恐れがあります。
- 乾燥機を使用しないでください。熱で劣化し、製品の寿命を縮める恐れがあります。
- 長期の使用により、はっ水性能(水を弾く力)が低下した場合は別売のはっ水スプレー等をご使用ください。

保管方法

- 高温になる場所を避け、風通しの良い場所に保管してください。
- ガソリンやシンナーと一緒に保管しないでください。

廃棄方法

- 廃棄方法はお住まいの自治体の収集方法に従ってください。

■ Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If this product ever fails due to a manufacturing defect, Montbell will repair or replace the product at Montbell's discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

■ Specifications

【Style】	【Name】
#1133529	Trekking Pack 50 Women's
#1133528	Trekking Pack 60
#1133531	Trekking Pack 70 Women's
#1133530	Trekking Pack 80
#1133532	Trekking Pack 100

Women's models feature the same design and functionality as men's models, but have back length, hipbelt, and shoulder harness specially designed for the female form. These models are ideal for heights ranging from approx. 145 cm to 165 cm.

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

mont-bell Co.,Ltd.

2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN
<https://www.montbell.com/>

mont·bell

User's Manual

Trekking Pack Series

Trekking Pack Series

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

■ Description

Provides large capacity with a streamlined, lightweight, and durable design. Comes in a 60L size (50L for women) suitable for 2 to 3 night backpacking trips, and an 80L and 100L size (70L for women) suitable for longer trips and expeditions.

■ Components

*Illustrated is 60L model.



■ Safety Warnings

Please read carefully.



WARNING!

Under certain conditions, use of this product can result in injury, death, or property damage.

- Do NOT modify or alter this product. Improper modifications and alterations can damage the product and impair functionality.
- Please follow recommended care and storage instructions. Improper care and storage can lead to a decrease in performance.

⚠ CAUTION!

Under certain conditions, use of this product can result in injury or property damage.

- Prior to each use, check the product's condition and stop using immediately if you notice any deterioration from age/use, damage or irregularities. May negatively affect the performance of the product.

■ Prior to use, inspect this product for:


Stop using immediately if you notice any irregularities.

- Damage to the fabric and straps
- Damage to the buckles


■ Directions

○ Installing the Trail Water Pack (sold separately)

Trail Water Pack is a hydration bladder with a drinking tube that allows you to hydrate on the go without removing your backpack. Refer to the user's manual included with the Trail Water Pack when installing it.

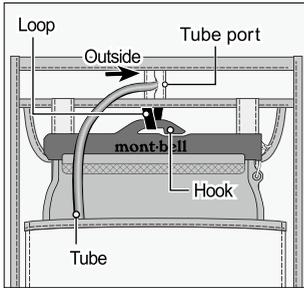

Attach the hook on the slide lock bar of the Trail Water Pack to the loop located at the top inside the main compartment. Pass the tube through the port to the outside of the pack.

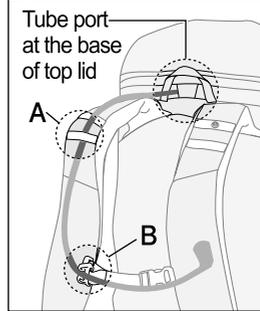

Pull the tube out through the tube port. Pass it through the loop (A) on the shoulder strap and adjust the position of the drinking valve. Use the clip (B) on the chest strap to secure the tube in place.

○ Fitting the backpack Adjusting Back Panel Length

What is torso length?

C7 vertebra
The bone sticking out when you bend your neck forward


Torso length
Measurement between C7 and the top of hip bones

Top of hip bones


Hip bone circumference
Horizontal line connecting the top edges of both hip bones (Iliac crests)

- ① Measure your torso length based on the left figure. The shoulder harness of this product is adjustable to accommodate the following torso lengths.


[Women's]
• S: ~51cm • S: ~46cm
• M: 51~55cm • M: 46~50cm
• L: 55cm~ • L: 50cm~

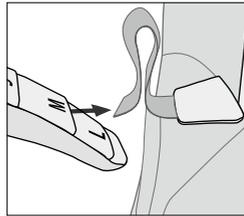

- ② Confirm the shoulder harness sizing that matches your torso length shown on the left. If necessary, loosen the ladder buckle at the base of the shoulder strap and remove the shoulder strap from the pack.

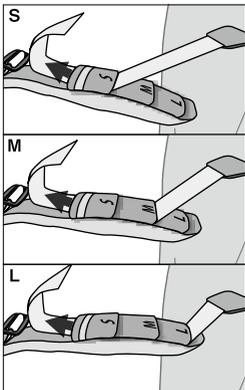

- ③ Thread the pack body strap through the slot on the shoulder strap as shown in the figure on the left.

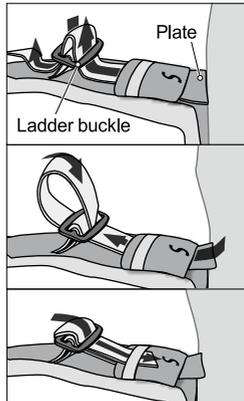


- ④ Pull the strap until the base plate is tightly fitted to the shoulder strap, then thread the strap through the ladder buckle to secure.

⚠ To prevent loosening or shifting of the strap during use, feed the excess strap back through the buckle again (as shown on the left). Make sure to pull the strap through tightly so that there is no loose points.


Wearing and adjusting

The correct fit is achieved when the back panel and shoulder harness fit the body without any gaps. When using the pack, ensure that it is properly fitted according to your own physique.


Before fitting, loosen all straps slightly. When simulating actual use conditions, load approx. 10 kg of weight into the backpack.

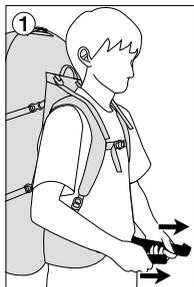


Put the pack on, then fasten the hipbelt with it sitting on the hip bones.

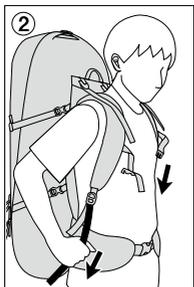


Pull the adjusters to fit the shoulder straps comfortably around your shoulders and under your arms.

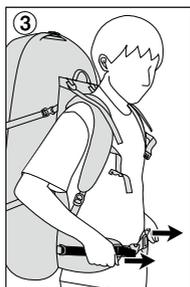

Pull the hipbelt stabilizers to prevent the backpack from shifting left and right.

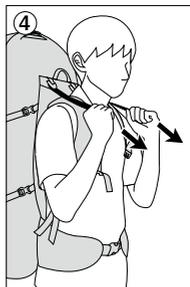

Pull the load lifters to draw the backpack's center of gravity in closer to your body.

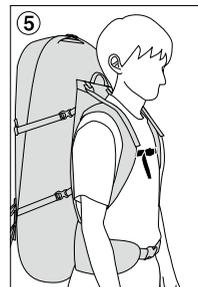

Fasten the chest strap to secure the shoulder harness in place.

The fitting of your backpack is now complete. Depending on what you wear, you may need to make minor adjustments to the shoulder straps, load lifters, and hipbelt straps. Fasten straps so that they are secure, but do not cause discomfort.

*The integrated frame of this product is pre-shaped to match the natural curve of the back. It is resilient and conforms naturally to the shape of the wearer's back, requiring no bending or adjustment.

Care

Improper care and storage of this product can shorten its lifespan. Follow the recommendations below to extend the lifespan of your product.

- Remove the frame before cleaning with water.
- To clean sweat stains and dirt, first rinse gently with water, and then use a sponge soaked in mild detergent to clean the surface. Rinse off all detergent and dry in the shade.
- Do NOT dry clean or machine wash. May damage the fabric.
- Do NOT dry in a dryer. May shorten the lifespan of the product.
- Water repellency will decrease over time. To restore performance, apply a water repellent spray (sold separately).

Storage

- Store in a well-ventilated, cool place.
- Do NOT store together with gasoline or paint thinner.

Disposal

- Follow local rules and regulations for proper disposal.

■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■ 仕様・サイズ

【品番】	【品名】
#1133529	トレッキングバック 50 Women's 女性用
#1133528	トレッキングバック 60
#1133531	トレッキングバック 70 Women's 女性用
#1133530	トレッキングバック 80
#1133532	トレッキングバック 100

女性用は、機能、デザインはそのままに、背面長、ヒップベルト、ショルダーハーネスを女性の体に合わせて設定しています。身長 145～165cmくらいまでの方に最適なモデルです。

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。